

SharpEye™

OLDHAM
Gas Monitoring Solutions

Triple IR flame detector 40/40 I

USER GUIDE



**INDUSTRIAL
SCIENTIFIC**



Ref : NP40IGB
REV A – Nov 2009

INDUSTRIAL SCIENTIFIC

GAS DETECTION

We are delighted that you have chosen an **INDUSTRIAL SCIENTIFIC** instrument and would like to thank you for your choice.

We have taken all the necessary measures to ensure that your instrument provides total satisfaction.

Now it is important to read this document carefully.

EXTENT OF RESPONSIBILITY

- * **INDUSTRIAL SCIENTIFIC** declines its responsibility towards any person for material damage, physical injury or death resulting wholly or partly from inappropriate use, installation or storage of its equipment resulting from failure to observe instructions and warnings and/or standards and regulations in force.
- * **INDUSTRIAL SCIENTIFIC** neither supports nor authorises any company, physical or moral person to assume responsibility on behalf of **INDUSTRIAL SCIENTIFIC**, even if it is involved in the sale of **INDUSTRIAL SCIENTIFIC** products.
- * **INDUSTRIAL SCIENTIFIC** cannot be held responsible for direct or indirect damage or be required to pay direct or indirect compensation resulting from the sale or use of any of its products **IF THESE PRODUCTS HAVE NOT BEEN DEFINED AND CHOSEN BY INDUSTRIAL SCIENTIFIC FOR THEIR SPECIFIC USE.**

CLAUSES CONCERNING PROPERTY

- * Drawings, plans, specifications and information included in this document contain confidential information that is the property of **INDUSTRIAL SCIENTIFIC**
- * None of this information may be reproduced, copied, divulged or translated, by physical, electronic or any other means, nor used as the basis for the manufacture or sale of **INDUSTRIAL SCIENTIFIC** equipment or for any other reasons **without prior consent from INDUSTRIAL SCIENTIFIC**

WARNINGS

- * This document is not contractually binding. In the interests of its customers, **INDUSTRIAL SCIENTIFIC** reserves to modify the technical specifications of its equipment without notice, in order to improve its performance.
- * **READ THIS MANUAL CAREFULLY BEFORE FIRST USE OF THE EQUIPMENT:** this manual must be read by any person who is or will be responsible for using, maintaining or repairing this equipment.
- * **This equipment will only provide the announced performance levels if it is used, maintained and repaired according to INDUSTRIAL SCIENTIFIC directives, by INDUSTRIAL SCIENTIFIC personnel or by personnel approved by INDUSTRIAL SCIENTIFIC**

G U A R A N T E E

5 years guarantee in normal conditions of use on parts and technical labour, return in our workshops, excluding consumables (sensors, filters, etc.)

About this Guide

This guide describes the SharpEye Model 40/40I Triple IR (IR3) Flame Detector and its features and provides instructions on how to install, operate and maintain the detector.

This guide includes the following chapters and appendixes:

- **Chapter 1, Introduction**, provides a general overview of the product, principles of operation, and performance considerations.
- **Chapter 2, Installing the Detector**, describes how to install the detector including preparations before installation, wiring and mode settings.
- **Chapter 3, Operating the Detector**, describes how to power-up and test the detector. The chapter also lists safety precautions you should take when operating the detector.
- **Chapter 4, Maintenance and troubleshooting**, describes basic maintenance procedures, and troubleshooting and support procedures.
- **Appendix A, Technical Specifications** : Lists the detectors technical specifications.
- **Appendix B, Wiring Instructions** , lists the wiring instructions for connecting the detector and also provides examples of typical wiring configurations.
- **Appendix C, RS-485 Communication Network** , provides an overview of the RS-485 communications network.
- **Appendix D, Accessories**, describes the accessories available for the detector.
- **Appendix E, SIL-2 Features**, describes the special conditions to comply with the requirements of EN 61508 for SIL 2 according to TUV.

Abbreviations and Acronyms

Abbreviation	Meaning
ATEX	Atmosphere Explosives
AWG	American Wire Gauge
BIT	Built In Test
EMC	Electromagnetic Compatibility
EOL	End of Line
FOV	Field of View
HART	Highway Addressable Remote Transducer-communication protocol
IAD	Immune at Any Distance
IECE _x	International Electrotechnical Commission Explosion
IPA	Isopropyl Alcohol
IR	Infrared
JP4	Jet Fuel
Latching	Refers to relays remaining in the ON state even after the ON condition has been removed
LED	Light Emitting Diode
LPG	Liquefied Petroleum Gas
mA	MilliAmps (0.001 amps)
MODBUS	Master-slave messaging structure
N.C.	Normally Closed
N.O.	Normally Open
N/A	Not Applicable
NFPA	National Fire Protection Association
NPT	National Pipe Thread
SIL	Safety Integrity Level
UNC	Unified Coarse Thread
VAC	Volts Alternating Current

Table of Contents

About this Guide	4
Abbreviations and Acronyms	5
1 INTRODUCTION.....	9
1.1 Overview	9
1.2 Model and Types	9
1.3 Features and Benefits	11
1.4 Principles of Operation.....	11
1.4.1 Hydrocarbon Fire Detection	11
1.4.2 Heated Optics.....	11
1.4.3 HART Protocol	12
1.4.4 RS-485 Modbus	12
1.4.5 Product Certification	12
1.5 Performance Considerations	13
1.5.1 Detection Sensitivity	13
1.5.2 Cone of Vision	14
1.5.3 False Alarms Prevention	15
1.5.4 Visual Indicators	16
1.5.5 Output Signals	17
1.5.6 Detector Status	17
1.5.7 Auxiliary Relay as End-of-Line Resistor	18
1.6 Internal Detector Tests	19
1.6.1 Continuous Feature Test.....	19
1.6.2 Built-In-Test (BIT)	19
2 INSTALLING THE DETECTOR.....	21
2.1 General Guidelines	21
2.2 Unpacking the Product.....	22
2.2.1 Checking the Product Type	22
2.3 Required Tools	22
2.4 Certification Instructions	23
2.5 Installation Cables	23
2.5.1 Conduit Installation	23
2.6 Installing the Tilt Mount (part no. 40/40-001)	24
2.6.1 Tilt Mount Specifications	25
2.6.2 Tilt Mount Assembly	25
2.7 Connecting the Detector	27
2.7.1 Verifying the Detector Wiring	28
2.8 Configuring your Detector.....	29
2.8.1 Sensitivity.....	29
2.8.2 Alarm Delay.....	30
2.8.3 Address Set-up.....	30
2.8.4 Function Set-up	30
2.8.5 Heated Optics.....	31

3	OPERATING THE DETECTOR	31
3.1	Powering Up	31
3.2	Safety Precautions	31
3.2.1	Default Functions Settings	32
3.3	Testing Procedures.....	32
3.3.1	Automatic BIT Test.....	33
3.3.2	Manual BIT Test.....	33
3.3.3	Testing with Fire Simulator Model 20/20-310	33
4	MAINTENANCE AND TROUBLESHOOTING.....	34
4.1	Maintenance.....	34
4.1.1	General Procedures.....	34
4.1.2	Periodic Procedures.....	34
4.1.3	Keeping Maintenance Records	35
4.2	Troubleshooting.....	35
	Appendices	36
A	Technical Specifications	37
B	Wiring Instructions	40
C	RS-485 Communication Network.....	43
D	Accessories.....	44
E	SIL-2 Features	48

List of Figures

Figure 1: Horizontal Field of View	14
Figure 2: Vertical Field of View	15
Figure 3: Indication LED: Indication LED	16
Figure 4: Detector with Tilt Mount.....	24
Figure 5: Tilt Mount Assembly	25
Figure 6: Tilt Mount Assembly (dimensions in mm and inches).....	26
Figure 7: Detector with Cover Removed.....	27
Figure 8: Wiring Terminals	41
Figure 9: Typical Wiring For 4 Wire Controllers (Using Option 1 or 2 Wiring).....	42
Figure 10: 0-20mA Wiring (Sink) 4-Wire Connection.....	42
Figure 11: 0-20mA Wiring (Source) 3-Wire Connection.....	43
Figure 12: RS-485 Networking	43
Figure 13: SharpEye IR3 Long Range Fire Simulator 20/20-310	44
Figure 14: 40/40I IR3 Detector Target Point.....	45
Figure 15: Tilt Mount	46
Figure 16: Weather Protection	47
Figure 17: Laser Detection Coverage Pointer	47
Figure 18: Air Shield	48

List of Tables

Table 1: Wiring Options.....	10
Table 2: Sensitivity Range Levels	13
Table 3: Fuel Sensitivity Ranges	14
Table 4: Immunity to False Alarm Sources	15
Table 5: Welding Immunity Distance.....	16
Table 6: LED Indications	16
Table 7: Available Output Types.....	17
Table 8: Detector Status	17
Table 9: Output Signals versus Detector State.....	18
Table 10: Results of a Successful BIT	20
Table 11: Results of an Unsuccessful BIT	20
Table 12: Results of a Successful Manual BIT	21
Table 13: Results of an Unsuccessful Manual BIT	21
Table 14: Tools	22
Table 15: USA Version	25
Table 16: European Version.....	25
Table 17: Model 40/40I Wiring Options.....	28
Table 18: Sensitivity Settings.....	29
Table 19: Functions.....	30
Table 20: Default Function Values.....	32
Table 21: Results of Successful Fire Simulator Test.....	33
Table 22: Troubleshooting Table	35
Table 23: Contact Ratings.....	37
Table 24: 20 mA Current Output.....	38
Table 25: Maximum DC resistance at 68 °F (20°C) for copper wire	40
Table 26: Wiring length in feet (meter)	41
Table 27: Wiring Connections	42
Table 28: Sensitivity Ranges	45

1 INTRODUCTION

1.1 Overview

The SharpEye 40/40I is a flame detector that utilizes improved IR3 technology to provide state-of-the-art fire protection. The 40/40I uses patented digital signal processing to analyze the spectral and dynamic characteristics of the infrared radiation, to identify fire events with exceptional sensitivity and extreme immunity to false alarms.

All 40/40 series detectors include a heated optical window for improved performance in icing, snow and condensation conditions.

Detection performance can be easily adapted to all environments, applications and requirements, by changing the detector's configuration parameters. Adjusting these parameters, as well as performing other maintenance and monitoring tasks, is possible by means of RS485-based Modbus communication or HART communication (in models with 0-20mA output).

The detector enclosure is ATEX certified EExd flameproof with an integral, segregated, rear, EExe terminal compartment (avoiding exposure of the sensors and electronics to surrounding environment). Hence the combined approval EExde IIB + H2 T5 (75°C) or T4 (85°C).

The SharpEye 40/40 detectors are designed to operate as a stand-alone unit directly connected to an alarm system or an automatic fire extinguishing system. The detector can also be a part of a more complex system, where many detectors and other devices are integrated through a common control unit.

1.2 Model and Types

The 40/40I is provided in various configurations depending on:

- Wiring options
- Temperature ranges
- Type of cable entries
- Housing type
- Required approval

The configuration detail is included in the product part number on the product label and takes the form: 40/40I XXXXX, where XXXXX defines the model according to the above requirements.

To modify the default or pre-ordered configuration and perform maintenance tasks, please refer to the *HART Protocol TM777030*, the *RS-485 Manual TM 777050* or *TM777060*.

The Part Numbers are defined as:

40/40I X X X X X

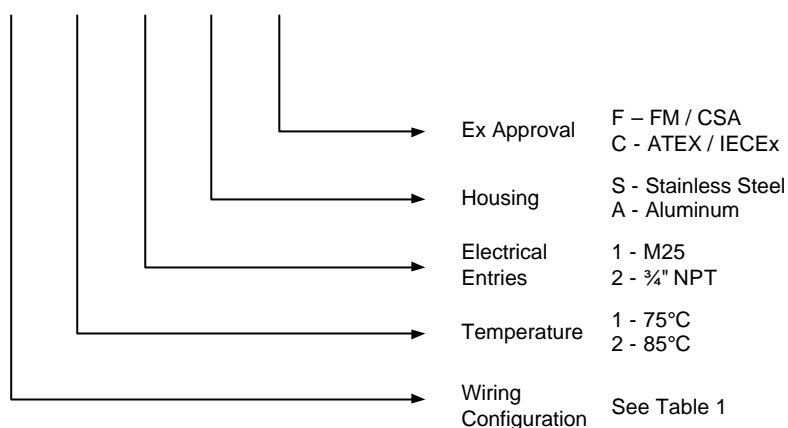


Table 1 describes the wiring options in detail.

Table 1: Wiring Options

Wiring Option	Connections Provided					
1	Power	Manual BIT	Fault Relay N.C	Alarm Relay N.O	4-20mA Sink	RS-485
2	Power	Manual BIT	Fault Relay N.O	Alarm Relay N.O	4-20mA Source	RS-485
3	Power	Manual BIT	Fault Relay N.O	Alarm Relay N.O	4-20mA Source	RS-485
4	Power	Manual BIT	Fault Relay N.C	Alarm Relay N.O	Auxiliary N.O	RS-485
5	Power	Manual BIT	Fault Relay N.O	Alarm Relay N.O	Auxiliary N.O	RS-485

Note: Wiring option 1 is default. The mA 'Sink' output can be altered to 'Source' type, with a link between terminals 1 and 8. No other wiring options can be changed on site.

For example, product number 40/40I-321SC has the following options:

- **Wiring Option:** 3 (Power, Manual BIT, RS-485, 0-20mA (Source) with HART Protocol, Fault Relay (N.O), Alarm Relay (N.O, N.C))
- **Temperature Range:** 2 (85°C)
- **Cable Entry:** 1 (M25)
- **Housing :** S (Stainless Steel)
- **Approval:** C (ATEX, IECEx)

Note: Check your specific part numbers against the information in *Checking the Product Type* on page 22.

1.3 Features and Benefits

- Detection Range: Up to 215 ft (65m) for a 1 ft² (0.1m²) n-heptane fire.
- Ultra High Immunity to False Alarms.
- Advanced Digital Processing of the Dynamic Characteristics of Fire: Flickering, threshold correlation and ratio.
- Multi IR Channels: Between 3-5 microns
- Field Programmable Sensitivity: Four ranges to avoid zone crossover.
- Built In Test (BIT): Manual and Automatic (see *Built-In-Test (BIT)* on page 19).
- Heated Window: Prevents effects of icing, snow, condensation.
- Electrical Interface:
 - Dry contact relays
 - Communication network RS-485
 - 0-20mA output
- HART Protocol: Communication protocol (see *HART Protocol* on page 12).
- EExde: Integral junction box for easy wiring.
- SIL-2: TÜV approved.
- Hazardous Area Certification: ATEX, IECEx, FM, CSA.
- EN54-10: Approved by LPCB (BRE, UK).

1.4 Principles of Operation

1.4.1 Hydrocarbon Fire Detection

The SharpEye 40/40I detector is designed to detect flames in which carbon dioxide (CO₂) is produced in the combustion process. These include all hydrocarbon flames, as well as other types of flames and burning materials such as wood or alcohol.

The detector's principle of operation is based on patented IR3 technology. This technology identifies the unique spectral signature that hot CO₂ has in the infrared (IR), namely a peak of the intensity at wavelengths 4.2 to 4.7μ.

The original IR3 technique (such as implemented in the SharpEye 20/20I flame detector) utilizes three infrared sensors, each sensitive to its own wavelength range. The first sensor is sensitive to wavelengths within the emission peak of hot CO₂. The other two sensors are sensitive to wavelengths above and below this peak. In the event of fire, the signal measured in the first sensor is significantly higher than those measured in the other two sensors. In order to issue a fire alarm, the detector requires that this occurs, as well as other conditions (for example, radiation is flickering in frequencies typical of flames). If exposed to non-fire radiation sources, the specific conditions required does not occur, and the detector does not react.

The SharpEye 40/40I further includes an additional IR sensor, sensitive to a different band within the emission peak of hot CO₂. The signal of this sensor is compared to those of the other three. This increases sensitivity for some types of flames. (For example, gas flames).

1.4.2 Heated Optics

The SharpEye 40/40 Flame Detectors use heated optics. The heater increases the temperature of the optical surface by 5-8°F (~3-5°C) above the ambient temperature to improve performance in icing, condensation and snow conditions.

The heated optics can be set to one of the following:

- Not operated
- On continuously
- Automatic, per temperature change (default): you can define the start temperature below which the window is heated. (The default is 68°F (20°C).) This temperature can be defined between 32°F (0°C) to 122°F (50°C). The heating stops when the temperature is 27°F (15°C) above the start temperature.

For more information, see *Configuring your Detector* on page 29.

1.4.3 HART Protocol

The 40/40 Flame Detectors use the HART Protocol.

HART Communication is a bi-directional industrial field communication protocol used to communicate between intelligent field instruments and host systems. HART is the global standard for smart process instrumentation and the majority of smart field devices installed in plants worldwide are HART-enabled.

HART technology is easy to use and very reliable.

Through the HART connection, you are able to perform:

- Detector set-up
- Detector troubleshooting
- Detector health and status

For more details, refer to the *HART Manual TM 777030*.

1.4.4 RS-485 Modbus

For more advanced communications, the 40/40 detector has an RS 485 Modbus-compatible output that provides data communication from a network (up to 247 detectors) to a host computer or universal controller for central monitoring. This feature allows for reduced installation costs, easy maintenance and local or remote diagnostic tools.

1.4.5 Product Certification

1.4.5.1 ATEX, IECEX

The 40/40I Flame Detector is certified to:

- ATEX Ex II 2 GD per SIRA 07ATEX 1149 and IECEX SIR. 07.0085.
- EExde IIB + H₂:
- T5 Ambient Temp. -55°C to +75°C.
- T4 Ambient Temp. -55°C to +85°C.

This product is suitable to use in hazardous zones 1 and 2 with IIB + H₂ gas group vapors present.

1.4.5.2 FM, CSA

The 40/40I Flame Detector is certified to FM and CSA Explosion Proof per:

- Class I, Division 1, Groups B, C and D, T5 Ta = 85°C.
- Dust Ignition Proof – Class II/III Division 1, Groups E, F and G.
- Ingress Protection – IP67, IP66, NEMA 250 Type 6P.
- Fuel Test Response including: Gasoline, N-Heptane, Diesel, JP5, Kerosene, Ethyl, Alcohol 95%, IPA, Methanol, Methane, LPG, Polypropylene, and Paper.
- For more details see *Report Project ID3029553*.

1.4.5.3 *SIL-2 Approved*

The 40/40I Flame Detector is certified to SIL-2 requirement per IEC 61508.4, Chapter 3.5.12.

The alert condition according to SIL-2 can be implemented by:

- Alert signal via 0-20mA current loop.
or
- Alert signal via alarm relay and fault relay.
- For more details and guidelines for configuring, installing, operating and service – see *SIL-2 Features* on page 48 and TÜV Report No. 968/EZ326.00/008.

1.4.5.4 *EN54-10*

The 40/40I Flame Detector is certified to EN54-10 and CPD.

- The detector has been tested and approved per EN54-10 by LPCB (BRE, UK).
- This test includes functional test, environmental test, EMI/EMC test and software check.
- For more details see EN54-10 Report No. TE243256.

1.5 **Performance Considerations**

1.5.1 **Detection Sensitivity**

Detection sensitivity is the maximum distance at which the detector reliably detects a specific size of fire and typical type of fuel (standard fire).

1.5.1.1 *Standard Fire*

Defined as a 1ft² / 0.1m² n-heptane, with maximum wind speed of 6.5 ft/sec (2 m/sec).

1.5.1.2 *Sensitivity Ranges*

The detector has four user-selectable sensitivity ranges. For each range there are two response levels.

- WARNING (Pre-alarm)
- ALARM

The detection distance, for the WARNING level, is approximately 10% higher than the ALARM distance.

Alarm response times for a standard fire at a specified range are shown figure 2

Table 2: Sensitivity Range Levels

Level	Response Time (sec)	Sensitivity Range - ft (m)
1	3	50 (15)
2 Default	5	100 (30)
3	8	150 (45)
4	10	215 (65)

For some typical ambient conditions the Zeta parameter as defined in NFPA 72 for the detector is 0.005 (1/meter).

Note: Zeta parameters may vary significantly with changes in temperature, air pressure, humidity, visibility conditions, and so on.

1.5.1.3 Other Fuels

The detector reacts to other types of fire as follows:

- The baseline fire refers to n-heptane 1ft² (0.1m²) and is defined as 100% sensitivity.
- For fuel fire – standard pan fire size: 1 ft² (0.1 m²).
- For gas flame - 20 inch (0.5m) high, 8 inch (0.2m) width plume fire.
- Maximum Response Time: 10 sec.

Table 3: Fuel Sensitivity Ranges

Type Of Fuel	Percent of Max. Distance at each Sensitivity Range
Gasoline	100%
N-Heptane	100%
JP4	70%
Kerosene	70%
Diesel Fuel	70%
Alcohol 95%	60%
IPA	60%
Methanol	55%
Methane	45%
LPG	45%
Paper	35%
Polypropylene	15%

1.5.2 Cone of Vision

- **Horizontal:** 100°

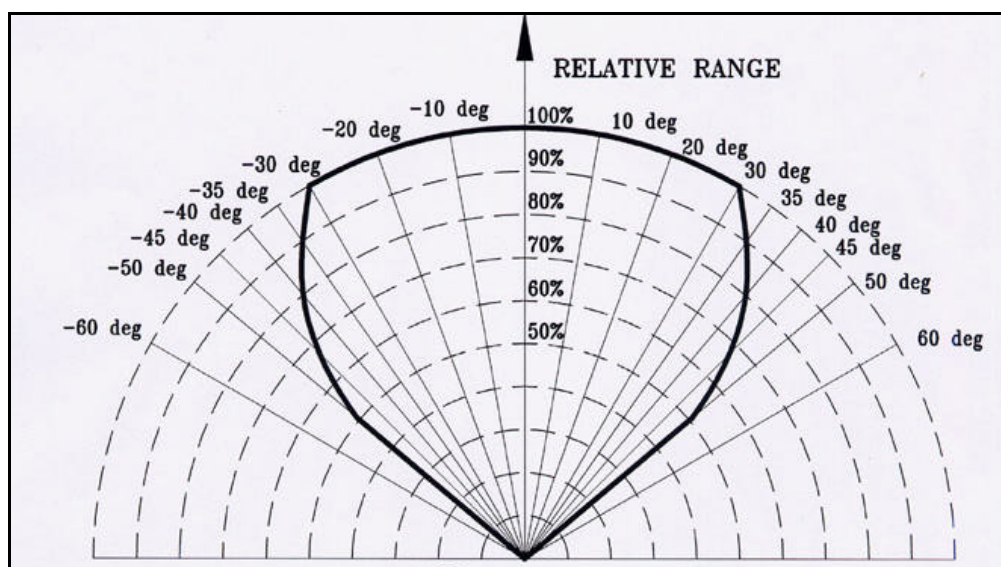


Figure 1: Horizontal Field of View

- **Vertical:** +50° (down) , -45° (up)

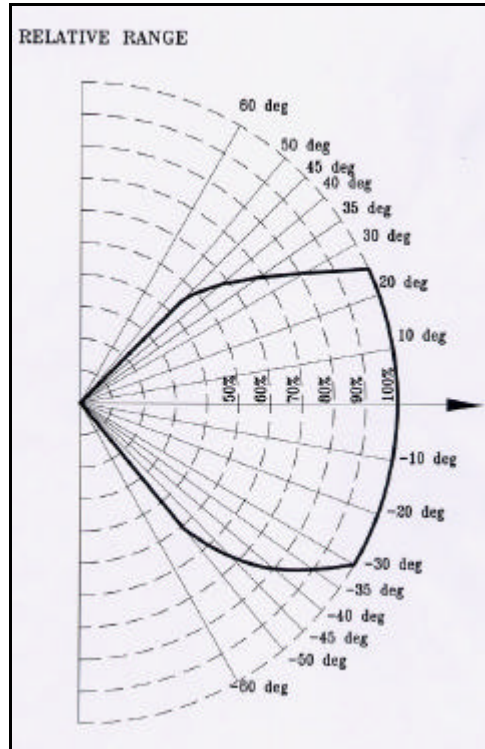


Figure 2: Vertical Field of View

1.5.3 False Alarms Prevention

To prevent false alarms, the detector will not alarm or react to the radiation sources specified in Table 4.

Table 4: Immunity to False Alarm Sources

Radiation Source	Immunity Distance ft (m)
Indirect or reflected sunlight	IAD
Vehicle headlights (low beam) conforming to MS53023-1	IAD
Incandescent frosted glass light, 300 W	IAD
Fluorescent light with white enamel reflector, standard office or shop, 70 W (or two 35 W)	IAD
Electric arc [12mm (¹⁵ / ₃₂ ") gap at 4000 V alternating current, 60 Hz]	IAD
Arc welding [6 mm (⁵ / ₁₆ ") rod; 210 A]	See Table 5
Ambient light extremes (darkness to bright light with snow, water, rain, desert glare and fog)	IAD
Bright colored clothing, including red and safety orange	IAD
Electronic flash (180 watt-seconds minimum output)	IAD
Movie light, 625 W quartz DWY lamp (Sylvania S.G.-55 or equivalent)	>6.5 (2)
Blue-green dome light conforming to M251073-1	IAD
Flashlight (MX 991/U)	IAD
Radiation heater, 3000 W	>3 (1)
Radiation heater, 1000 W with fan	IAD

Quartz lamp (1000 W)	>3 (1)
Mercury vapor lamp	IAD
Grinding metal	IAD
Lit cigar	>1 (0.3)
Lit cigarette	>1 (0.3)
Match, wood, stick including flare up	>10 (3)

Notes:

- IAD = Immune at Any Distance.
- All sources are chopped from 0 to 20 Hz.

Table 5: Welding Immunity Distance

Sensitivity Setting	Detection Range	Immunity Distance
1	50 ft (15m)	>6 ft (2m)
2	100 ft (30m)	>12 ft (4m)
3	150 ft (45m)	>17 ft (6m)
4	215 ft (65m)	>25 ft (7.5m)

1.5.4 Visual Indicators

One 3-color LED indicator is located inside the detector window, as shown in Figure 3. The detector statuses are listed in Table 6.

Table 6: LED Indications

Detector Status	LED color	LED mode
Fault, BIT Fault	Yellow	4 Hz - flashing
Normal	Green	1 Hz - flashing
Warning	Red	2 Hz - flashing
Alarm	Red	Steady

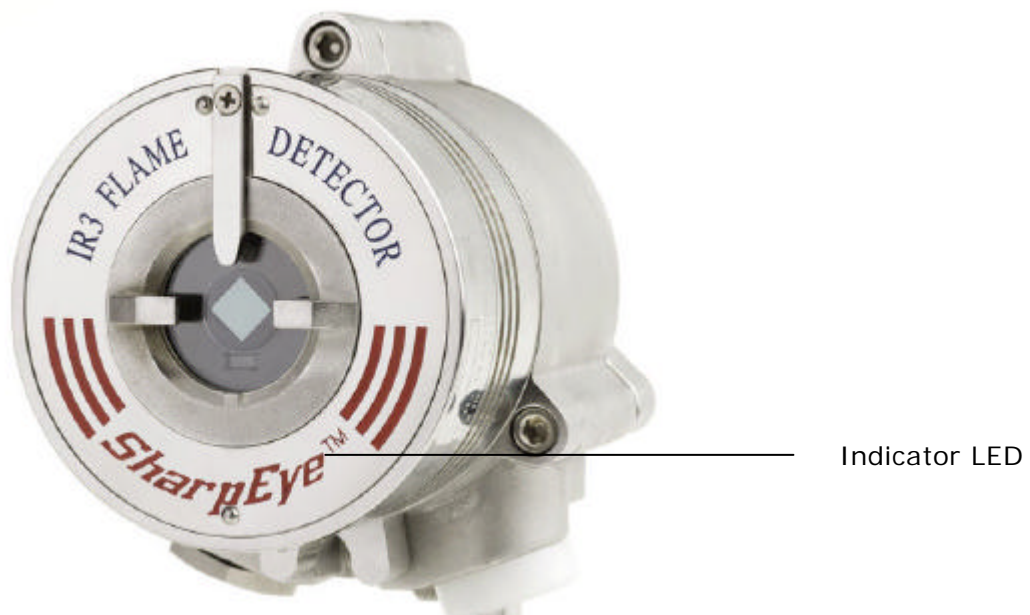


Figure 3: Indication LED: Indication LED

1.5.5 Output Signals

Outputs are available according to the default configuration or the wiring options selected for the 40/40I IR3 Detector. Determine the outputs for your model according to table 7

The detector incorporates several types of output suitable to different control systems:

- 0-20mA (stepped) with HART
- Relays (Alarm, Fault, Auxiliary)
- RS-485 Modbus

Table 7: Available Output Types

Output Type	Version	Detector Status
Alarm relay	40/40I – Options 1XXXX, 4XXXX, 5XXXX	The relay is N.C.
	40/40I – Options 2XXXX, 3XXXX	The relay is N.O. and N.C.
Auxiliary relay	40/40I – Options 4XXXX and 5XXXX	The relay is N.O.
Fault relay	40/40I – Options 1XXXX, 2XXXX, 4XXXX	The relay is N.C. energized
	40/40I – Options 3XXXX, 5XXXX	The relay is N.O. energized
0-20mA current output	40/40I – Option 1XXXX	SINK Option, with HART protocol (can be changed to Source – see Figure 10)
	40/40I – Options 2XXXX and 3XXXX	SOURCE Option with HART protocol
RS-485	All versions	Modbus Protocol

1.5.6 Detector Status

The possible detector function statuses are listed in Table 8. A more detailed fault analysis can be seen via HART or RS485.

Table 8: Detector Status

Status	Description
Normal	Normal operation.
BIT	Built-In-Test being performed.
Warning	Fire detected - changed to Warning (pre-alarm state).
Alarm	Fire detected - changed to Fire Alarm state.
Latched Alarm (Optional)	The alarm outputs remain latched on following detection of a fire that has already been extinguished.
BIT Fault	A fault is detected during BIT sequence or other electric failure. The detector will continue to detect for fire.
Fault	A fault is detected when the power supply is too low or due to a software fault or electrical failure. The detector will NOT detect fire in this condition.

In each state, the detector activates different outputs, as specified in table 9.

Table 9: Output Signals versus Detector State

Detector State	LED Indicator	LED Mode	Alarm Relay	Auxiliary Relay	Fault Relay	mA output
Normal	Green	1Hz	Off	Off	On	5 mA
Warning	Red	2Hz	Off	On ⁽⁴⁾	On	10 mA
Alarm ⁽¹⁾	Red	Constant	On	On	On	15 mA
Latch ⁽²⁾	Red	Constant	On	Off	On	15 mA
				On ⁽⁴⁾	On	15 mA
BIT Fault ⁽³⁾	Yellow	4Hz	Off	Off	Off	2 mA
Warning at BIT Fault	Red	2Hz	Off	On ⁽⁴⁾	Off	10 mA
Alarm at BIT Fault	Red	Constant	On	On	Off	15 mA
Fault	Yellow	4Hz	Off	Off	Off	0 mA

Notes:

- 1 The alarm outputs are activated while alarm conditions exist and will stop approximately 5 seconds after the fire is no longer detected.
- 2 The Alarm state can be optionally latched via programmed function. (Default is non-latching).
- 3 The detector will remain in BIT Fault state until it has passed a successful BIT.
- 4 The Auxiliary Relay can be activated at the Warning level or Alarm level, depending on programmed function.
- 5 The outputs depend on the wiring options.

1.5.6.1 Optional Latching

Alarms are set as non-latching by default. However, the detector includes a latched alarm output capability, which operates according to the programmed function.

If selected, upon detection of a fire, the detection signal is latched until a manual reset is performed (disconnecting the power supply or performing a manual BIT (see Manual BIT on page 20).

Latching affects the Alarm Relay, 0-20mA output, the Alarm LED (the Auxiliary Relay will be latched only when the programmable function **Auxiliary Relay** is set to **YES**).

Notes:

- The Auxiliary Relay is available only in Model 40/40I – 4XXXX and 5XXXX
- The 0-20mA is available only in Model 40/40I – 1XXXX, 2XXXX, 3XXXX

1.5.7 Auxiliary Relay as End-of-Line Resistor

The Auxiliary Relay can be used as End-of-Line (EOL) resistance in Model 40/40I-4XXXX, and 5XXXX only. In this case, the Auxiliary Relay is active as long as the detector is not in Fault state.

1.6 Internal Detector Tests

The detector performs two types of self tests:

- Continuous Feature Test, page 19
- Built-In-Test (BIT), page 19

1.6.1 Continuous Feature Test

During normal operation, the detector tests itself continuously and indicates a fault if a failure is found. This type of test complies with SIL-2 requirements.

The detector continuously tests:

- Input voltage level
- All internal regulator voltage level
- Voltage level status of sensor and sensor circuitry for noise or disconnection in the electronic circuitry
- 0-20mA level output
- Relays and heater operation
- Processor Watch dog
- Software
- Memory
- Oscillator frequency

Response to Fault Indication

If a failure is found, the detector indicates by:

- Fault relay:
 - Opens in wiring option 1, 2, and 4
 - Closes in wiring option 3 and 5
- 0-20mA: indicates Fault (0mA or 2mA) in wiring option 1, 2, 3
- LED – Yellow flashes (4 Hz)

Correcting the Fault

The fault indications remain until the detector's power is removed. The fault indications return if the fault is still found when power is restored.

1.6.2 Built-In-Test (BIT)

The detector's Built-In-Test (BIT) also checks the following:

- Electronics circuitry
- Sensors
- Window cleanliness

The detector can be set to perform the BIT in the following modes:

- Automatically and manually
- Manually only

Note: In Manual BIT, the outputs may also be tested and Control System 'inhibit' should be applied if this could initiate other systems.

1.6.2.1 *How the BIT Operates*

- The detector's status remains unchanged if the result of a BIT is the same as the current status (NORMAL or BIT Fault)
- the detectors' status is changed (from Normal to BIT Fault or vice versa) if the BIT differs from the current status

Note: In 'BIT Fault' status the detector can continue to detect a fire.

1.6.2.2 *Automatic BIT*

The detector automatically performs a BIT every 15 minutes. A successful BIT sequence does not activate any indicator.

The results of a successful and unsuccessful BIT are listed in

Table 10 and

Table 11.

Table 10: Results of a Successful BIT

Output	Result
Fault relay	<ul style="list-style-type: none">• Model 1XXX, 2XXX, 4XXX Wiring options 1, 2, 4: remains CLOSED• Model 3XXX, 5XXX Wiring options 3 and 5: remains OPEN
0-20mA output	Wiring option 1, 2, 3: Normal (5 mA)
Power LED	Green, Flashing, 1 Hz On (Normal)

Table 11: Results of an Unsuccessful BIT

Output	Result
Fault relay	<ul style="list-style-type: none">• Wiring option 1, 2, 4: changes to Open• Wiring option 3 and 5: changes to Closed
0-20mA output	Wiring option 1, 2, 3: BIT Fault (2mA)
Power LED	Yellow, Flashing, 4 Hz
BIT procedure	Performed every 1 minute

1.6.2.3 *Manual BIT*

The BIT is manually initiated by momentarily connecting Terminal 3 with Terminal 2 (or a switch across these terminals in the safe area).

If the BIT is unsuccessful, all outputs will function as described for Automatic BIT, but the BIT is now automatically executed every 1 minute. This continues until a successful BIT occurs, when the detector will resume normal operation.

The results of a successful and unsuccessful Manual BIT are listed in Table 12 and Table 13.

Table 12: Results of a Successful Manual BIT

Output	Result
FAULT relay	<ul style="list-style-type: none"> Wiring options 1, 2, and 4: remains CLOSED (Normal) Wiring options 3 and 5: remains OPEN (Normal)
ALARM relay	Activated for 3 sec (only when the function Alarm BIT is set to YES)
AUXILIARY relay	For wiring options 4 and 5: is activated for 3 sec (only when the function Auxiliary BIT is set to YES)
0-20mA output	Wiring option 1, 2, 3: <ul style="list-style-type: none"> Initiates 15 mA only when the function Alarm BIT is set to YES Initiates 10 mA when the function Auxiliary BIT is set to YES and the function Alarm BIT is set to NO
POWER LED	Green, Flashing, 1 Hz

Table 13: Results of an Unsuccessful Manual BIT

Output	Result
FAULT relay	<ul style="list-style-type: none"> Wiring option 1, 2, 4: changes to OPEN Wiring option 3 and 5: changes to CLOSED
0-20mA output	Wiring option 1, 2, 3: Indicates BIT FAULT (2mA)
POWER LED	Yellow, Flashing, 4 Hz

1.6.2.4 Manual BIT only selected

The BIT is initiated manually by momentarily connecting Terminal Number 3 with Terminal Number 2 or a switch across these terminals in the safe area.

2 INSTALLING THE DETECTOR

This chapter provides basic guidelines for installing the detector. It does not attempt to cover all of the standard practices and codes of installation. Rather, it emphasizes specific points of consideration and provides some general rules for qualified personnel. Wherever applicable, special safety precautions are stressed.

2.1 General Guidelines

To ensure optimal performance and an efficient installation, consider the following guidelines:

- Sensitivity:** To determine the level of sensitivity, consider the following:
 - Size of fire at the required distance to be detected
 - Type of flammable materials
- Spacing and Location:** The number of detectors and their locations in the protected area are determined by:
 - Size of the protected area
 - Sensitivity of the detectors
 - Obstructed lines of sight
 - Cone of view of the detectors

- **Environment:**
 - Dust, snow or rain can reduce the detectors sensitivity and require more maintenance activities.
 - The presence of high intensity flickering IR sources may affect sensitivity.
- **Aiming the Detector:**
 - The detector should be aimed toward the center of the detection zone and have a completely unobstructed view of the protected area.
 - Whenever possible, the detector face should be tilted down at a 45° angle to maximize coverage and prevent accumulation of dust and dirt.
 - Do not start an installation unless all conceivable considerations regarding detection location have been taken into account.

Installation should comply with **NFPA 72E or any other local and International regulations and standards**, as applicable to flame detectors and installation of Ex approved products.

2.2 Unpacking the Product

Upon receipt of your detector, check and record the following:

- 6 Verify the appropriate Purchase Order.
Record the Part Number (P/N) and Serial Number of the detectors, and the installation date in an appropriate Log-book.
- 7 Open the package before installation and visually inspect the detector.
- 8 Verify that all components required for the detector installation are readily available before beginning the installation. If the installation is not completed in a single session, secure and seal the detectors and conduits / cable entries.

2.2.1 Checking the Product Type

Check that your product has the configuration / options that you ordered. Check the detailed part number on the label and compare this information with the descriptions contained in *Model and Types* on page 9.

2.3 Required Tools

The detector can be installed using general-purpose common tools and equipment. Table 14 lists the specific tools required to install the detector.

Table 14: Tools

Tool	Function
Hex Key ¼ inch	Mount the detector on the tilt mount
Hex Key ⅜ inch	Open and close detector cover (for wiring)
Flat Screw Driver 4 mm	Connect ground terminal
Flat Screw Driver 2.5 mm	Connect wires to the terminal blocks

For wiring, use color-coded conductors or suitable wire markings or labels. 12 to 20 AWG (0.5 mm² to 3.5 mm²) wires may be used for site wiring. The selection of wire gauge should be based on the number of detectors used on the same line and the distance from the control unit, in compliance with specifications (see *General Instructions for Electrical Wiring* on page 40).

2.4 Certification Instructions



Warning: Do not open the detector, even when isolated, when flammable atmosphere present.

Use the following certification instructions:

- The cable entry point may exceed 167°F (75°C). Suitable precautions should be taken when selecting the cable.
- The equipment may be used with flammable gases and vapors with apparatus groups IIA and IIB + H2:
 - T5 in the ambient temperature range: –67°F (–55°C) to +167°F (+75°C).
 - T4 in the ambient temperature range: –67°F (–55°C) to +185°F (+85°C).
- Installation shall be carried out by suitably trained personnel in accordance with the applicable code of practice such as EN 60079-14:1997.
- Inspection and maintenance of this equipment shall be carried out by suitably trained personnel in accordance with the applicable code of practice such as EN 60079-17.
- Repair of this equipment shall be carried out by suitably trained personnel in accordance with the applicable code of practice such as EN 60079-19.
- The certification of this equipment relies upon the following materials used in its construction:
 - **Enclosure** : 316L Stainless Steel or Aluminum
 - **Window**: Sapphire Glass
- If the equipment is likely to come into contact with aggressive substances, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected, thus ensuring that the type of protection provided by the equipment is not compromised:
 - Aggressive substances: acidic liquids or gases that may attack metals, or solvents that may affect polymeric materials.
 - Suitable precautions: regular checks as part of routine inspections or establishing from the material's data sheets that it is resistant to specific chemicals.
- Special Conditions for safe use: The flame detectors should not be used as safety related devices in accordance with directive 94/9/EC.

2.5 Installation Cables

Follow the following guideline for the cable installation:

- All cables to the detector must be well shielded in order to comply with EMC requirement (see *Technical Specifications* on page 46).
- Ground the detector to the nearest ground point (not more than 3m from the detector location).
- Install the detector with the cable entries placed downwards.

2.5.1 Conduit Installation

The conduit used for the cabling must comply with the following:

- To avoid water condensation water in the detector, install the detector with the conduits placed downward, that include drain holes.

- When using the optional tilt mount, use flexible conduits for the last portion connecting to the detector.
- For installations in atmospheres as defined in group B of the NFPA 72E, seal the conduits inlets.
- When pulling the cables through the conduits, ensure that they are not tangled or stressed. Extend the cables about 30 cm. (12 in.) beyond the detector location to accommodate wiring after installation.
- After the conductor cables have been pulled through the conduits, perform a continuity test.

2.6 Installing the Tilt Mount (ref. B103888)

The Tilt Mount enables the detector to be rotated up to 60° in all directions.

Figure 4 shows the Detector mounted on the Tilt Mount.

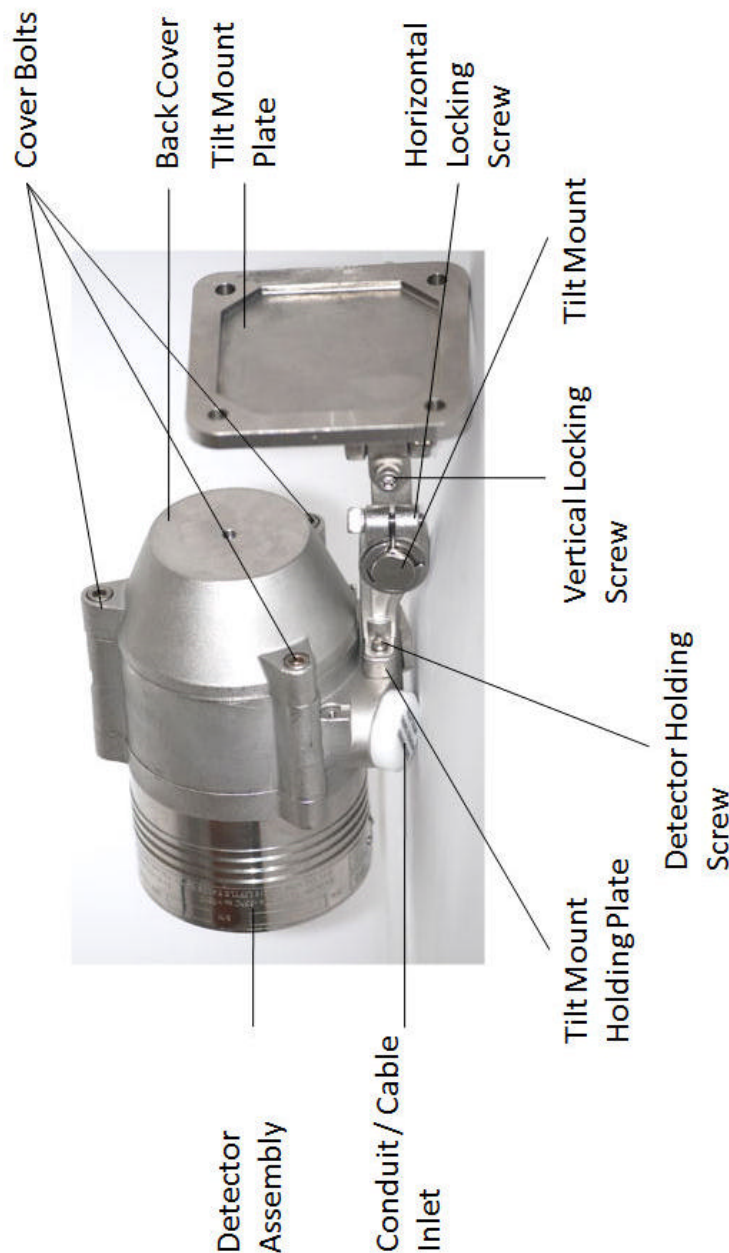


Figure 4: Detector with Tilt Mount

2.6.1 Tilt Mount Specifications

Table 15: USA Version

Item	Qty	Type	Location
Tilt Mount	1	40/40-001	
Screw	4	¼" 20 UNC x ¾"	Detector – Holding plate
Spring Washer	4	No. ¼"	Detector - Holding plate

Table 16: European Version

Item	Qty	Type	Location
Tilt Mount	1	40/40-001	
Screw	4	M6 x 1 x 20 mm	Detector – Holding plate
Spring Washer	4	M6	Detector - Holding plate

2.6.2 Tilt Mount Assembly

Figure 5 shows the Tilt Mount Assembly.

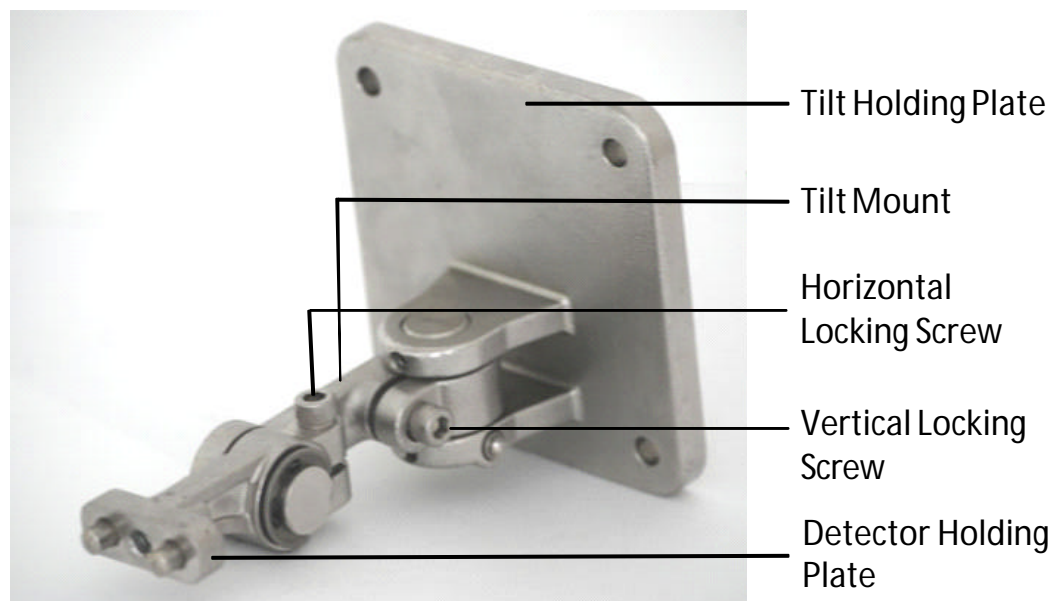


Figure 5: Tilt Mount Assembly

Figure 6 shows the Tilt Mount Assembly with dimension in both millimeters and inches.

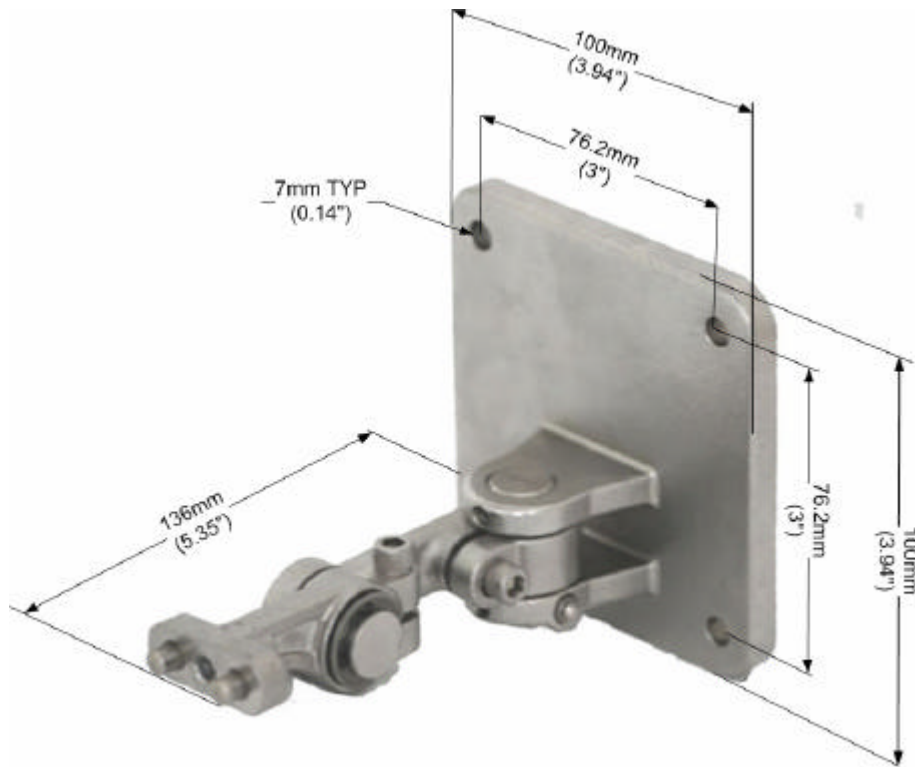


Figure 6: Tilt Mount Assembly (dimensions in mm and inches)

➤ **To install the Tilt Mount and Detector:**

9 Place the tilt mount in its designated location and secure it with four (4) fasteners through four (4) holes 7 mm in diameter. Use the 4 screws and spring washers according to the kit (see

10 Table 15 and

11 Table 16).

Note: Removing the detector for maintenance purpose does not require the Tilt Mount to be removed).

12 Unpack the detector.

13 Place the detector with its conduit/cable entries pointing downwards on the holding plate of the tilt mount. Secure the detector with $\frac{5}{16}$ " 18 UNC x $\frac{3}{4}$ " screw to the tilt mount.

14 Release the Horizontal and Vertical Locking Screws using $\frac{3}{16}$ " Hex Key such that the detector can be rotated. Point the detector towards the protected area and make certain that the view of the area is unobstructed. Secure the detector in that position by tightening the locking screws on the tilt mount. (Make sure the detector is in the correct position.).

The detector is now correctly located, aligned and ready to be connected to the system.

2.7 Connecting the Detector

This section describes how to connect the electric cabling to the detector (Figure 7).

➤ To connect the detector to the electrical cables

- 15 Disconnect the power.
- 16 Remove the back cover of the detector by removing four (4) socket head-screws in the cover bolts. The terminal chamber is now revealed.
- 17 Remove the protective plug mounted on the Detector Conduit/Cable entry; pull the wires through the Detector Inlet.
- 18 Use a ¾" – 14 NPT explosion-proof conduit connection or M25x1.5 flameproof gland to assemble the cable / conduit to the detector.

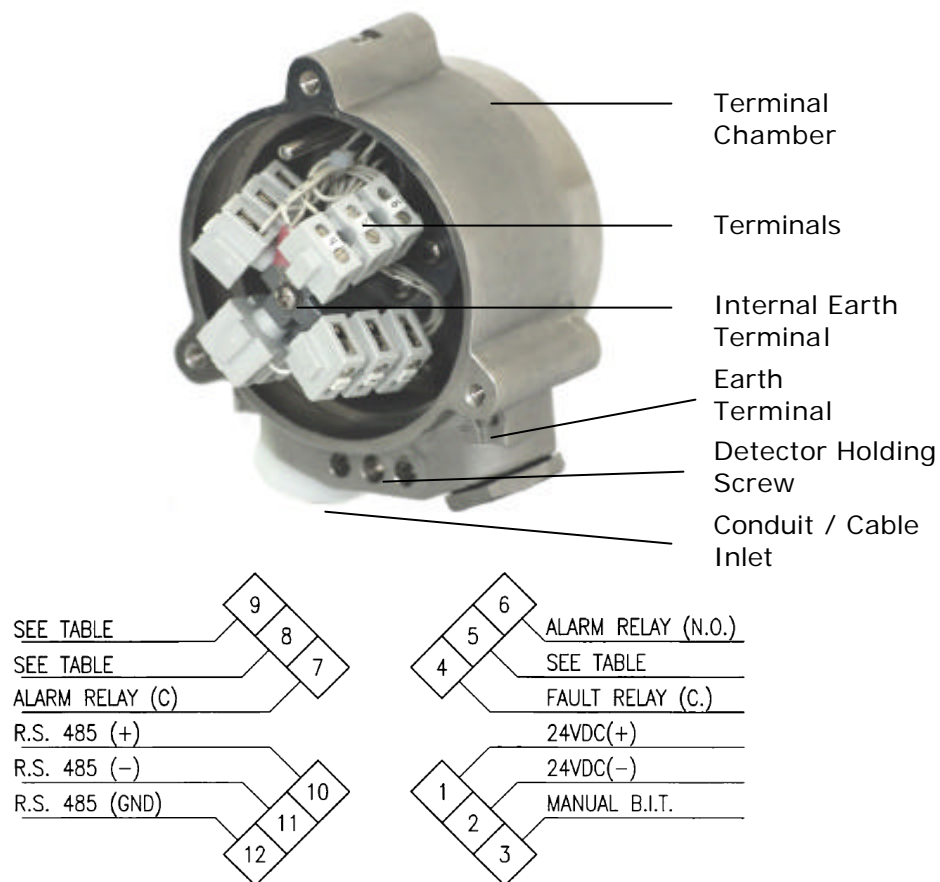


Figure 7: Detector with Cover Removed

- 19 Connect the wires to the required terminals on the Terminal Board according to the wiring diagram (Figure 7) and Table 17.
- 20 Connect the grounding (earth) wire to the ground (earth) screw outside the detector (Earth Terminal). The detector must be well grounded to earth ground.
- 21 Verify the wiring. Improper wiring may damage the detector.
- 22 Check the wires for secure mechanical connection and press them neatly against the terminal to prevent them from interfering while closing the back cover (Figure 7).
- 23 Place and secure the detector's back cover by screwing the four (4) socket-head-screws in the Cover Bolts (Figure 4).

2.7.1 Verifying the Detector Wiring

The detector has five output wiring options within the EExde integral terminal section of the enclosure. There are 12 terminals labeled 1-12.

Table 17 describes the function of each terminal for all the wiring options.

Table 17: Model 40/40I Wiring Options

Wire Terminal No.	Option 1 Default	Option 2	Option 3	Option 4	Option 5
1	+24 VDC	+24 VDC	+24 VDC	+24 VDC	+24 VDC
2	0 VDC	0 VDC	0 VDC	0 VDC	0 VDC
3	Manual BIT	Manual BIT	Manual BIT	Manual BIT	Manual BIT
4	Fault Relay N.C.	Fault Relay N.C.	Fault Relay N.O.	Fault Relay N.C.	Fault Relay N.O.
5					
6	Alarm Relay N.O.	Alarm Relay N.O.	Alarm Relay N.O.	Alarm Relay N.O.	Alarm Relay N.O.
7	Alarm Relay C	Alarm Relay C	Alarm Relay C	Alarm Relay C	Alarm Relay C
8	0-20mA In	Alarm Relay N.C.	Alarm Relay N.C.	Auxiliary N.O.	Auxiliary N.O.
9	0-20mA Out	0-20mA Out	0-20mA Out	Auxiliary C	Auxiliary C
10	RS-485+ (1)	RS-485+ (1)	RS-485+ (1)	RS-485+ (1)	RS-485+ (1)
11	RS-485- (1)	RS-485- (1)	RS-485- (1)	RS-485- (1)	RS-485- (1)
12	RS-485 GND	RS-485 GND	RS-485 GND	RS-485 GND	RS-485 GND

Notes:

- RS-485 is used for communication network as specified in *Appendix C* (Terminals 10, 11, 12).
- Alarm relay:
 - N.O. energized contact in wiring options 1, 4, 5.
 - N.O. and N.C. energized in options 2 and 3.
- 0-20mA is 'Sink' in option 1 and 'Source' in option 2 and 3.
- 0-20mA includes HART protocol.
- In Wiring Option 1, link Terminals 1 and 8 to change the mA output to 'Source'.
- The Fault output is N.C. energized SPST relay. The contacts are closed when the Detector is in its normal operational condition in options 1, 2 and 4, and available as N.O. energized in options 3 and 5.
- The Auxiliary output is N.O. energized (SPST) relay. The Auxiliary Relay may act in parallel with the ALARM relay to activate another external device or it may provide a warning signal, depending on the function configuration.

2.8 Configuring your Detector

You can reprogram the function setup using the RS-485 connection or using the Hart Protocol as follows:

- **Industrial Scientific Host Software**: The Industrial Scientific Host Software is for use on a PC or laptop. Refer to Manual TM777050 for programming instructions. The Host software enables you to change the functions.
- **Handheld Unit**: Refer to Manual 777060 for programming instructions when using the Handheld Unit. The connection to the Handheld is fast and intrinsically safe. It enables you to change the functions in situ with no need to remove the detector.
Note: Industrial Scientific can provide a suitable cable (P/N 794079-5) with integral RS485/USB converter to connect between the Detector and a PC/laptop.
- **Hart Protocol**: Refer to Manual TM 777030 for programming instructions.

These functions enable you to set:

- Sensitivity
- Alarm Delay
- Time Delay for Anti Flare mode
- Address Setup
- Mode of Operation
- Heated Optics Operation

The factory Default settings listed for each function are:

- Sensitivity – 30
- Alarm Delay – A
- Alarm Latch – No
- Auxiliary Relay – No
- Automatic BIT – Yes
- Alarm BIT – No
- Auxiliary BIT – No
- EOL – No
- Heated Optics – Auto
- Temperature – 20

2.8.1 Sensitivity

The detector offers four (4) sensitivity settings. The settings refer to an n-heptane or gasoline fire of 1ft² (0.1m²), from low sensitivity of 50 ft (15m) to 215 ft (65m). For other types of fuel sensitivity, refer to

Table 3.

Table 18: Sensitivity Settings

Sensitivity Setting	Detector Distance feet	Detector Distance meters
15	50	15
30 (default)	100	30
45	150	45
60	215	65

2.8.2 Alarm Delay

The detector is equipped with an Alarm Delay option, which provides programmable time delays with settings at:

- Antiflare* (default)

*The Antiflare mode is selected to prevent false alarms in locations where fast flares may be present. The Time Delay for fire alarms in this mode ranges from 2.5 to 15 seconds (usually, less than 10 seconds).

Other delays settings are available:

0, 3, 5, 10, 15, 20 or 30 seconds

When an Alarm (Detection) level condition occurs, the detector delays the execution of the Alarm outputs by the specified period of time. The detector then evaluates the condition for 3 seconds. If the Alarm level is still present, the Alarm outputs are activated. If this condition no longer exists, the detector returns to its standby state.

The Alarm delay option affects the output relays and the 0-20mA. The LEDs and outputs indicate warning levels during the delay time only if the fire condition exists.

2.8.3 Address Set-up

The detector provides up to 247 addresses that can be changed with RS485 communication link or HART Protocol.

2.8.4 Function Set-up

You can select the desired functions as detailed in the following table.

Table 19: Functions

Function	Setting
Alarm Latch	<ul style="list-style-type: none">• Yes: Enable Alarm latching.• No: Disable Alarm latching (default).
Auxiliary Relay**	<ul style="list-style-type: none">• Yes: Activate Auxiliary Relay at Warning level.• No: Activate Auxiliary Relay at Alarm level (default).
Automatic BIT	<ul style="list-style-type: none">• Yes: Perform Automatic & Manual Bit (default).• No: Perform Manual Bit only.
Alarm BIT	<ul style="list-style-type: none">• Yes: Successful Manual Bit activates the Alarm Relay for approximately 3 seconds (default).• No: Successful Manual Bit does not activate the Alarm Relay.
Auxiliary BIT**	<ul style="list-style-type: none">• Yes: Successful Manual Bit activates the Auxiliary Relay for approximately 3 seconds (default).• No: Successful Manual Bit does not activate the Auxiliary Relay.
EOL**	<ul style="list-style-type: none">• Yes: Auxiliary Relay is used as End of Line.• No: Auxiliary Relay operates in accordance with Function 2 and 5 (default).

Note: ** only available in Model 40/40I-4XXXX and 5XXXX

2.8.5 Heated Optics

The heated optics can be defined as one of the following modes:

- Heated Mode
 - OFF: Not operated
 - On: Continuously
 - AUTO: Per temperature change

In AUTO mode, the default HEAT ON setting is 68°F (20°C). Heating stops when the temperature is 27°F (15°C) above the start temperature.

You can define the start temperature below which the window will be heated. The temperature can be defined between 32°F and 122°F (0°C to 50°C).

3 OPERATING THE DETECTOR

This chapter describes how to power up and test the detector. It also includes some very important safety checks that you should make before operating the detector.

3.1 Powering Up

This section describes how to power up the detector. Follow these instructions carefully to obtain optimal performance from the detector over its life cycle:

➤ **To power up the detector:**

24 Turn on the power.

25 Wait approximately 60 seconds for the detector to finish the start-up procedure.

Applying power initiates the following sequence of events:

- The yellow LED flashes at 4 Hz.
- BIT is executed.

If successful, the green LED flashes at 1 Hz and the FAULT relay contacts close, mA output is 5 mA.

26 Enter to Normal mode.

Note: The majority of detectors are used in the default non-latching alarm mode. Only perform a Reset when the Latching alarm option has been programmed.

➤ **To reset a detector when in it is in a LATCHED ALARM state:**

- Do one of the following:
 - Disconnect power (Terminal Number 1 or Terminal Number 2).
 - or
 - Initiate a Manual BIT.

3.2 Safety Precautions

After powering-up, the detector requires almost no attention in order to function properly, but the following should be noted:

- Follow the instructions in this guide and refer to the drawings and specifications.
- Do not expose the detector to radiation of any kind unless required for testing purposes.
- Do not open the detector housing, while power is applied.
- Do not open the electronic compartment. This part should be kept closed at all times and only opened in the factory. Opening the electronic component side invalidates the warranty.

- You should only access the wiring compartment to wire or remove the detector or access RS485 terminals for maintenance.
- Disconnect or disable external devices, such as automatic extinguishing systems before carrying out any maintenance.

3.2.1 Default Functions Settings

Table 20 lists the default function configuration supplied with the detector.

Table 20: Default Function Values

Function	Value	Notes
Sensitivity	30	
Alarm Delay	A	Anitflare
Alarm Latch	No	
Auxiliary Relay	No	In wiring options 1, 2, 3 the Auxiliary Relay is not available. This function is not used.
Automatic BIT	Yes	
Alarm BIT	No	
Auxiliary BIT	No	In wiring options 1, 2, 3 the Auxiliary Relay is not available. This function is not used.
EOL	No	In wiring options 1, 2, 3 the Auxiliary Relay is not available. This function is not used.
Heat Mode	Auto	
Heat On	20	The detector starts heating the window for any temperature below this value (in degrees Celsius).

- In order to change the default function use:
 - P.C with Industrial Scientific software, refer to Manual 777050 for instructions.
 - Handheld unit, refer to Manual 777060 for instructions.
 - USB cable with 485 converter (1 m) part number 794079-5.
 - HART Protocol, refer to Manual 777030 for instructions.

3.3 Testing Procedures

This section describes the proof testing procedure for proper operation of the detector. The detector can be tested using the Manual Built-in-Test or the Industrial Scientific IR3 Fire Simulator - 20/20-310.

The detector performs internal test continuously and automatic BIT test every 15 minutes for more details refer to *Built-In-Test (BIT)* on page 19.

This section includes the following topics:

- Automatic BIT Test, page 33
- Manual BIT Test. page 33
- Testing with Fire Simulator Model 20/20-310, page 33

3.3.1 Automatic BIT Test

Check that the indicators show normal conditions. See *Powering Up* on page 31.

3.3.2 Manual BIT Test

Important: If the function setup **Alarm BIT** and/or **Auxiliary BIT** are set to **Yes** (default **No**), the Alarm, Auxiliary Relay and 0-20mA outputs are activated during a Manual BIT. Therefore, automatic extinguishing systems or any external devices that may be activated during BIT **must** be disconnected.

➤ **To perform a Manual BIT:**

27 Verify that the detector is Normal Mode.

28 Initiate Manual BIT. The results of successful and unsuccessful manual BITs are detailed in Table 12 and Table 13.

3.3.3 Testing with Fire Simulator Model 20/20-310

The Fire Simulator Model 20/20-310 can be used to simulate exposure of the detector to a real fire condition. The detector is exposed to radiation at the required detection level. As a result, the detector will generate a Fire Alarm signal. See *Long Range IR3 Fire Simulator* on page 44 for more information.

Important: If the detector is exposed to a fire simulator, the Alarm and Accessory Relays and 4-20mA are activated during the simulation. Therefore, automatic extinguishing systems or any external devices, which may be activated during this process, must be disconnected.

➤ **To perform Fire Simulator Test:**

29 Power up the system and wait up to 60 seconds for the detector to turn to a normal state. The Power LED turns on.

30 Aim the Industrial Scientific Fire Simulator Model 20/20-310 at the target point of the detector (Figure 14), in a way that the radiation emitted by it is facing directly towards the detector. (See *Long Range IR3 Fire Simulator* on page 44).

31 Press the operation button once. After few seconds, a successful test shows the results shown in Table 21.

Table 21: Results of Successful Fire Simulator Test

Component	Action	Notes
4-20mA	Turn to 15mA	For a few seconds and then return to 5mA
Alarm Relay	Activated	for a few seconds and then returns to Normal
Auxiliary Relay	Activated	for a few seconds and then returns to Normal
Fault Relay	Remains active during the test	
LED	Red, steady	

The detector is now ready for operation.

4 MAINTENANCE AND TROUBLESHOOTING

This chapter deals with preventive maintenance, describes possible faults in detector operation and indicates corrective measures. Ignoring these instructions may cause problems with the detector and may invalidate the warranty. Whenever a unit requires service, please contact Industrial Scientific or its authorized distributor for assistance.

4.1 Maintenance

This section describes the basic maintenance steps that should be taken to keep the detector in good working condition and includes the following topics:

- General Procedures, page 34
- Periodic Procedures, page 34
- Keeping Maintenance Records, page 35

4.1.1 General Procedures

Maintenance should be performed by suitably qualified personnel, who are familiar with local codes and practice. Maintenance requires ordinary tools.

4.1.1.1 *Cleaning*

The detector must be kept as clean as possible. Clean the viewing window and the reflector of the Flame Detector periodically.

The frequency of cleaning operations depends upon the local environmental conditions and specific applications. The fire detection system designer will give his recommendations.

➤ **To clean the detector viewing window and reflector:**

- 32** Disconnect power to the detector before proceeding with any maintenance including window/lens cleaning.
- 33** Use water and detergent, and then rinse the viewing window with clean water.
- 34** Where dust, dirt or moisture accumulates on the window, first clean it with a soft optical cloth and detergent, and then rinse with clean water.

4.1.2 Periodic Procedures

In addition to preventive cleaning and maintenance, the detector should be functionally tested every six months or as dictated by local codes and regulations. These tests should also be carried out if the detector has been opened for any reason.

4.1.2.1 *Power-Up Procedure*

Perform Power-Up procedure every time power is restored to the system. Follow the instructions described in *Powering Up* on page 31.

4.1.2.2 *Functional Test Procedure*

Perform a functional test of the detector as described in *Internal Detector Tests* on page 19.

4.1.3 Keeping Maintenance Records

It is recommended that maintenance operations performed on a detector are recorded in a Log-book. The record should include the following:

- Installation date, and contractor
- Serial and tag no.
- Entries for every maintenance operation performed, including the description of the operation, date and personnel ID.

If a unit is sent to Industrial Scientific or a distributor for service, a copy of the maintenance records should accompany it.

4.2 Troubleshooting

This section is intended to be a guide to correct problems which may happen during normal operation.

Table 22: Troubleshooting Table

Problem	Cause	Corrective Action
LEDs Off Fault Relay at N.O 0-20mA at 0mA	No power at the unit	<ul style="list-style-type: none">• Check that the correct power is sent to the detector.• Check power polarity.• Check wiring in the detector.• Send the detector back for repairs.
Yellow LED flashes at 4 Hz Fault Relay at N.O 0-20mA at 0mA	Fault Detector <ul style="list-style-type: none">• Low Voltage• Faulty Detector	<ul style="list-style-type: none">• Check the voltage at the detector; verify at least 24V at the detector terminal.• Send the detector back for repairs.
Yellow LED flashes at 4 Hz Fault Relay at N.O 0-20mA at 2mA	BIT Fault <ul style="list-style-type: none">• Faulty Detector	<ul style="list-style-type: none">• Clean detector window.• Re-power the detector.• Replace the detector.
Red LED constantly on	If no fire exists, then, detector alarm latched	Perform Reset to the detector.
Alarm Relay at On 0-20mA at 15mA	Alarm condition	<ul style="list-style-type: none">• Check cause for alarm.• If no alarm, re-power the detector.• Send the detector back for repairs.

Appendices

A Technical Specifications

A.1 Electrical Specifications

Operating Voltage 18-32 VDC

- Power Consumption**
- Without Heated Optic:
Max. 100 mA in Standby
Max. 150 mA in Alarm
 - With Heated Optic:
Max. 150 mA in Standby
Max. 200 mA in Alarm

Electric Input Protection The input circuit is protected against voltage-reversed polarity, voltage transients, surges and spikes according to MIL-STD-1275B.

Electrical Interface There are five output-wiring options. These options must be defined at the factory per the customer order and cannot be changed at the customer facility.

See *General Instructions for Electrical Wiring* on page 40 for the wiring/terminal diagram for each option.

Unless otherwise specified, the default is Option 1. The wiring arrangement is identified on the detector by the part number (see *Model and Types* on page 9).

- **Option 1:** Power, RS-485, 0-20mA (Sink), on HART protocol, Fault I Relay (N.C), Alarm Relay, (N.O) (see Figure 7).
- **Option 2:** Power, RS-485, 0-20mA (Source), Fault Relay (N.O), Alarm Relay, (N.O), (N.C).
- **Option 3:** Power, RS-485, 0-20mA (Source) and HART Protocol, Fault Relay (N.O), Alarm Relay (N.O, N.C).
- **Option 4:** Power, RS-485, Fault Relay (N.C), Auxiliary Relay (N.O), Alarm Relay, (N.O).
- **Option 5:** Power, RS-485, Fault Relay (N.O), Auxiliary Relay (N.O), Alarm Relay, (N.O).

Electrical Outputs

- **Dry Contact Relays**

Table 23: Contact Ratings

Relay Name	Type	Normal Position	Maximum Ratings
Alarm	DPST	N.O., N.C.	2A at 30 VDC or 0.5A at 250 VAC
Auxiliary	SPST	N.O.	5A at 30 VDC or 250 VAC
Fault *	SPST	N.C. or N.O	5A at 30 VDC or 250 VAC

Notes:

- The Fault relay (in wiring options 1, 2, 4) is normally energized closed during normal operation of the detector. The relay is de-energized open if a fault condition or low voltage situation occurs.

- * In wiring options 3, 5 the relay is normally energized open during normal operation of the detector. The relay is de-energized close contact if a fault condition or low voltage situation occurs.
- **0-20mA Current Output:** The 0-20mA can be Sink or Source according to the wiring option source (see *General Instructions for Electrical Wiring* on page 40). The maximum permitted load resistance is 600Ω.

Table 24: 20 mA Current Output

State	Output
Fault	0 + 0.5 mA
BIT Fault	2 mA±10%
Normal	5 mA±10%
Warning	10 mA±5%
Alarm	15 mA±5%

- **HART Protocol**
The HART is a digital communication signal at a low level on top of the 0-20mA. This is a bi-directional field communication protocol used to communicate between intelligent field instruments and the host system.
Through HART protocol the detector can:
 - Display set-up
 - Reconfigure the set-up
 - Display detector status and definition
 - Perform detector diagnostics
 - Troubleshoot
 For more details refer to *HART Manual 777030*.
- **Communication Network:** The detector is equipped with an RS-485 communication link that can be used in installations with computerized controllers.
The communications protocol is Modbus compatible.
 - This protocol is a standard and widely used.
 - It enables continuous communication between a standard Modbus controller (Master device) and a serial Network of up to 247 detectors.

Heated Optics

The front window can be heated to improve performance in icing, condensation and snow conditions. The heater increases the temperature of the optical surface by 5-8°F (3-5°C) above the ambient temperature. The heated optics can be configured in three ways:

- **Off:** The optics are not heated
- **On:** The optics are heated continuously
- **Auto:** Operated only when the change of temperature requires the heating. (default)

In **Auto** mode the start heating temperature can be defined between 32°F - 122°F (0°C - 50°C). The detector stops heating the window when the temperature is 27°F (15°C) above the start temperature.

A.2 Mechanical Specifications

Enclosure	Stainless Steel 316 or Aluminum, heavy duty copper free (less than-1%), red epoxy enamel finish
Hazardous Area Approvals	<ul style="list-style-type: none">• FM, CSA Class I Div. 1 Groups B, C and D; Class II/III Div. 1 Groups E, F and G.• ATEX, IECEX ; EX II 2 GD, EExde IIB + H2 T5 (75°C), T4 (85°C)
Water and Dust Tight	<ul style="list-style-type: none">• NEMA 250 type 6p.• IP 66 and IP 67 per EN 60529
Electronic Modules	Conformal coated
Electrical Connection (two entries)	<ul style="list-style-type: none">• x ¾" - 14NPT conduit or• 2 x M25 (ISO)

A.3 Dimensions

5" x 4.5" x 6.4" (127 x 117 x 156 mm)

A.4 Weight

Stainless Steel: 5.5 lb (2.5 kg)

Aluminium: 2.5 lb (1.2 kg)

A.5 Environmental Specifications

The SharpEye 40/40I is designed to withstand harsh environmental conditions.

High Temperature	<ul style="list-style-type: none">• Designed to meet MIL-STD-810C, method 501.1 procedure II• Operating temperature: +167°F (+75 °C)• Storage temperature: +185 °F (+85 °C)
Low Temperature	<ul style="list-style-type: none">• Designed to meet MIL-STD-810C, method 502.1, procedure I• Operating temperature: -57°F (-50°C)• Storage temperature: -65°F (-55°C)
Humidity	<ul style="list-style-type: none">• Designed to meet MIL-STD-810C, method 507.1, procedure IV• Relative humidity of up to 95% for the operational temperature range
Salt Fog	<ul style="list-style-type: none">• Designed to meet MIL-STD-810C, method 509.1, procedure I• Exposure to a 5% Salt Solution Fog for 48 hours

Dust	<ul style="list-style-type: none"> Designed to meet MIL-STD-810C, method 510.1, procedure I Exposure to a dust concentration of 0.3 frames/cubic ft. at a velocity of 1750 fpm, for 12 hours
Vibration	<ul style="list-style-type: none"> Designed to meet MIL-STD-810C, method 514.2, procedure VIII Vibration at an acceleration of 1.1g within the frequency range of 5-30 Hz, and an acceleration of 3g within the frequency range of 30-500 Hz
Mechanical Shock	<ul style="list-style-type: none"> Designed to meet MIL-STD-810C, method 516.2, procedure I Mechanical Shock of 30g half-sine wave, for 11 msec
Electromagnetic Compatibility (EMC)	<p>This product is in conformance with EMC directive 89/336/EC:</p> <ul style="list-style-type: none"> Conducted Disturbances: IEC/EN61000-4-6 ESD: IEC/EN61000-4-2 Burst: IEC/EN61000-4-4 Surge: IEC/EN61000-4-5 Immunity to main supply voltage variations: MIL-STD-1275B Radiated Immunity – IEC/EN61000-4-3 Conducted Immunity – IEC/EN61000-4-6

B Wiring Instructions

B.1 General Instructions for Electrical Wiring

Follow the instructions detailed in this section for determining the correct wire gauge to be used for the installation.

- 35** Use Table 25 to determine the required wire gauge /size for general wiring, such as relay wiring. Calculate the permitted voltage drop with respect to load current, wire gauge and length of wires.

Table 25: Maximum DC resistance at 68°F (20°C) for copper wire

AWG #	mm ²	Ohm per 100 ft	Ohm per 100 m
26	0.12 - 0.15	4.32	14.15
24	0.16 - 0.24	3.42	11.22
22	0.30 - 0.38	1.71	5.60
20	0.51 - 0.61	1.07	3.50
18	0.81 - 0.96	0.67	2.20
16	1.22 - 1.43	0.43	1.40
14	1.94 - 2.28	0.27	0.88
12	3.09 - 3.40	0.17	0.55
10	4.56 - 6.64	0.11	0.35

36 Use Table 26 to select wire gauge for power supply wires. DO NOT connect any circuit or load to detectors' supply inputs.

- Select **Number of detectors** connected in one circuit.
- Select wiring **Length** per your installation requirements.
- Refer to **Power Supply Range** for voltage extreme applied.

Table 26: Wiring length in feet (meter)

Number of Detectors	Recommended Wire Diameter (AWG)					Power Supply Range (VDC)
24	18	16	14	-	-	22-32
20	18	16	14	-	-	22-32
16	20	18	16	14	-	22-32
12	20	18	16	14	-	20-32
8	20	18	16	14	-	20-32
4 and less	20	18	16	16	14	20-32
Ft (m)	164 (50)	328 (100)	492 (150)	656 (200)	820 (240)	
Max. Length from Power Supply to Last Detector						

B.2 Typical Wiring Configurations

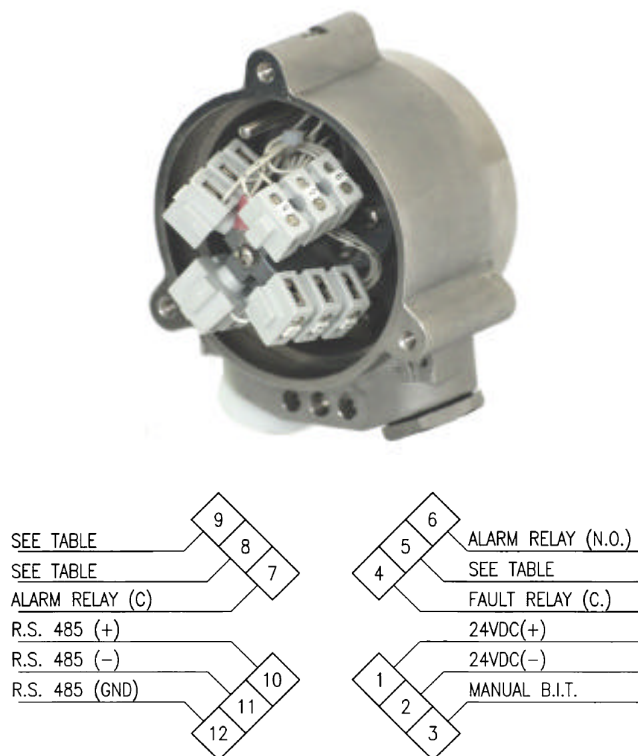


Figure 8: Wiring Terminals

Table 27: Wiring Connections

Wiring Option	Detector Model	Terminals		
		5	8	9
1	40/40I-1XXXX	Fault Relay (N.C)	0-20mA (Sink)	0-20mA (Sink)
2	40/40I-2XXXX	Fault Relay (N.C)	Alarm Relay (N.C)	0-20mA Duct Source
3	40/40I-3XXXX	Fault Relay (N.O)	Alarm Relay (N.C)	0-20mA Duct Source
4	40/40I-4XXXX	Fault Relay (N.C)	Auxiliary Relay (N.O)	Auxiliary Relay (C)
5	40/40I-5XXXX	Fault Relay (N.O)	Auxiliary Relay (N.O)	Auxiliary Relay (C)

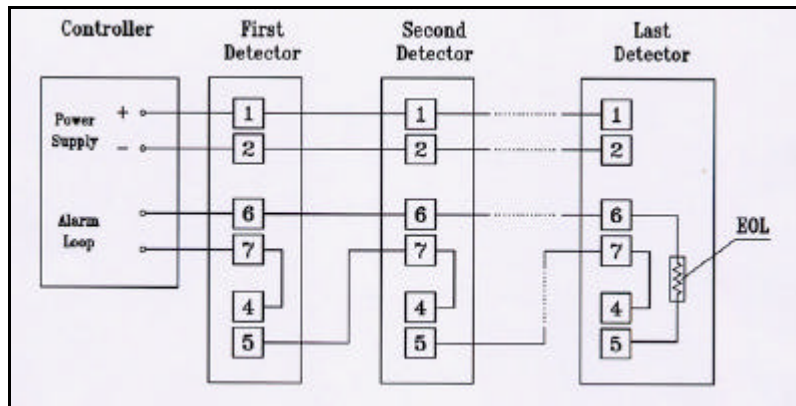


Figure 9: Typical Wiring For 4 Wire Controllers (Using Option 1 or 2 Wiring)

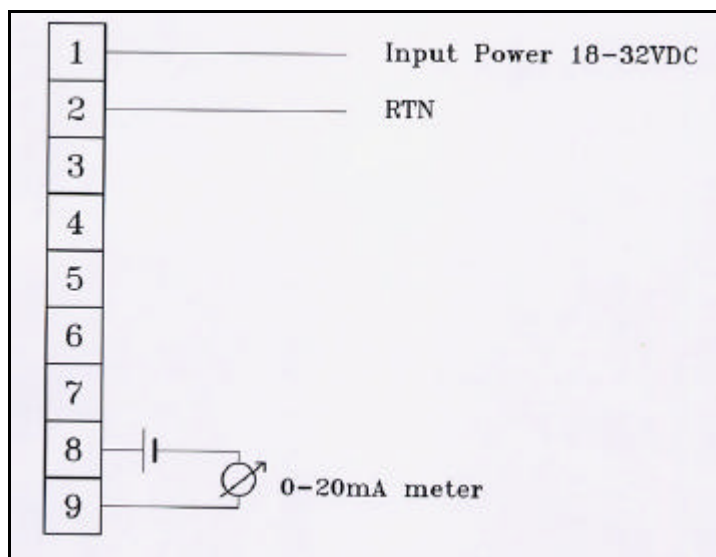


Figure 10: 0-20mA Wiring (Sink) 4-Wire Connection

(For Source version, link Terminals 1 and 8)

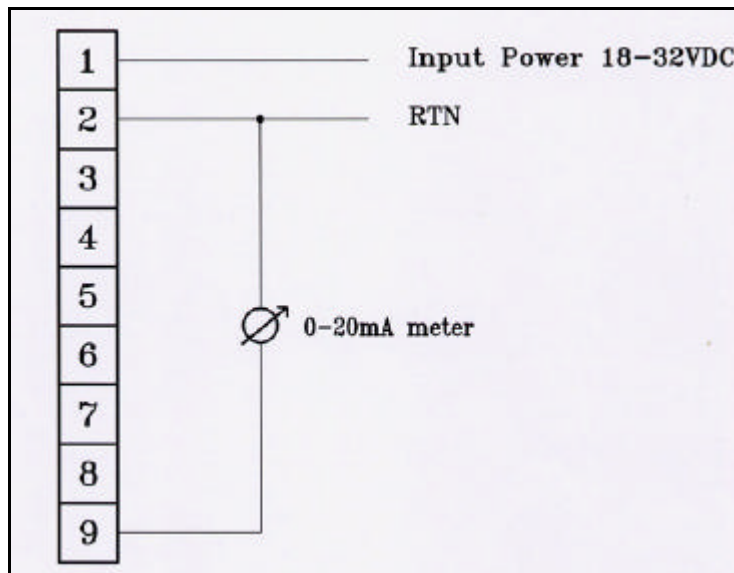


Figure 11: 0-20mA Wiring (Source) 3-Wire Connection

Notes: The detectors are supplied as:

- Isolated 0-20mA – **Sink** in wiring option 1.
- As non-isolated 0-20mA – **Source** in wiring options 2 and 3.
- There are no 0-20mA outputs in wiring options 4 and 5.

C RS-485 Communication Network

C.1 RS-485 Overview

By using the RS-485 network capability of the IR3 detector and additional software, it is possible to connect up to 32 detectors in an addressable system with four (4) wires only (2 for power and 2 for communication). Using repeaters, the number of detectors can be much larger (32 detectors for each repeater) up to 247 on the same four (4) wires. When using the RS-485 network, it is possible to read each detector status (FAULT, WARNING, and ALARM) and to initiate a BIT to each detector individually.

For more details, consult Industrial Scientific.

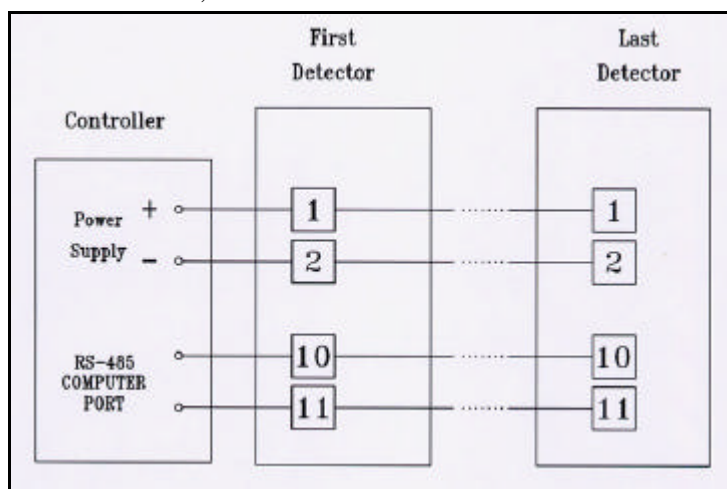


Figure 12: RS-485 Networking

D Accessories

This appendix describes the accessories that can help you maximize fire detection with the SharpEye IR3 flame detector:

D.1 Long Range IR3 Fire Simulator (Ref 6798433°)

The SharpEye IR3 Long Range Fire Simulator 20/20-310 is designed specifically for use with SharpEye IR3 flame detectors. The Fire Simulator emits IR radiation in a unique sequential pattern corresponding to and recognizable by the IR3 detector as fire. This allows the IR3 detectors to be tested under simulated fire conditions without the associated risks of an open flame.

There is an optional beam collimator, model no. 20/20-190, specially designed for extended test range.



Figure 13: SharpEye IR3 Long Range Fire Simulator 20/20-310

D.1.1 Unpacking

Verify that you have received the following contents:

- Delivery form
- Fire Simulator with integral batteries
- Battery charger
- Optional Beam Collimator
- Storage case

D.1.2 Operating Instructions

Warning: Do not open the Fire Simulator to charge the batteries or for any other reason in a hazardous area.

Caution: The following test simulates a real fire condition and may activate the extinguishing system or other alarms. If this is not desired, disconnect/inhibit them before the test and reconnect after the simulation.

➤ **To simulate a fire:**

37 Aim the Fire Simulator towards the detector's Target Point.



Figure 14: 40/40I IR3 Detector Target Point

38 When testing keep a distance of at least 50 cm (20 inches) from the detector.

39 Press the operation button once. Fire simulation lasts for 20 seconds. The detector sends an alarm signal (solid red LED).

40 Wait 20 seconds before repeating the test.

41 Verify that the optical window is clean.

D.1.3 Range

Table 28: Sensitivity Ranges

Sensitivity	Detection Range (ft / m)	Standard Test Range (ft / m)	Extended Test Range (ft / m)
1 (Low)	50 / 15	3.8 / 1.2	7 / 2.2
2	100 / 30	7 / 2.2	14.5 / 4.5
3	150 / 45	10 / 3.2	22 / 7
4 (High)	215 / 60	14.5 / 4.5	29 / 9

Notes:

- The minimum distance from the detector is 20 inches (50 cm).
- The optional beam collimator is fitted for Extended Range.

At extreme temperatures, there is a 15% maximum reduction in the range.

Important: Keep the Fire Simulator in a safe place when not in use.

D.1.4 Charging the Battery

The Fire Simulator uses NiCd batteries as a rechargeable power source. When the batteries are fully charged, the simulator operates for at least 60 times without recharging. An internal buzzer is sounded when the voltage from the batteries is lower than the required operational level.

➤ **To charge the battery:**

42 Place the Fire Simulator on a table in a safe area.

43 Turn the sealed plug (next to the operation button) counter-clockwise with a suitable wrench.

44 Connect the battery charger.

- 45 Charge for a maximum of 14 hours.
- 46 Disconnect the charger.
- 47 Tighten the sealed plug clockwise.

D.1.5 Technical Specifications

Mechanical	<ul style="list-style-type: none">• Explosion Proof Enclosure:• NFPA (designed to meet)• Class I, Division 1 & 2 Groups B, C and D• Class II, Division 1 & 2 Groups E, F and G• ATEX EX II2G NEMKO 02ATEX255• EExd IIB T5 50°C per En 50-014 & EN50-018
Electrical	<ul style="list-style-type: none">• Power: 8 VDC Max.• 6 x Rechargeable 1.2 VDC NiCd Batteries• Current: 2.5A Avg.• Charge: 400 mA for 14 Hours
Environment	<ul style="list-style-type: none">• Temperature Range:-4 to +122°F (-20 to +50°C)• Vibration Protection: 1g (10-50hz)• Water and Dust: IP 67 per EN 60529
Physical	<ul style="list-style-type: none">• Dimensions: 11.5 x 10.1 x 3.9 in (292 x 258 x 100 mm)• Weight; 7.5 lb. (3.4 Kg)

D.2 Tilt Mount – (Ref. B103888)

The Tilt mount provides accurate directional selection for optimum area coverage.

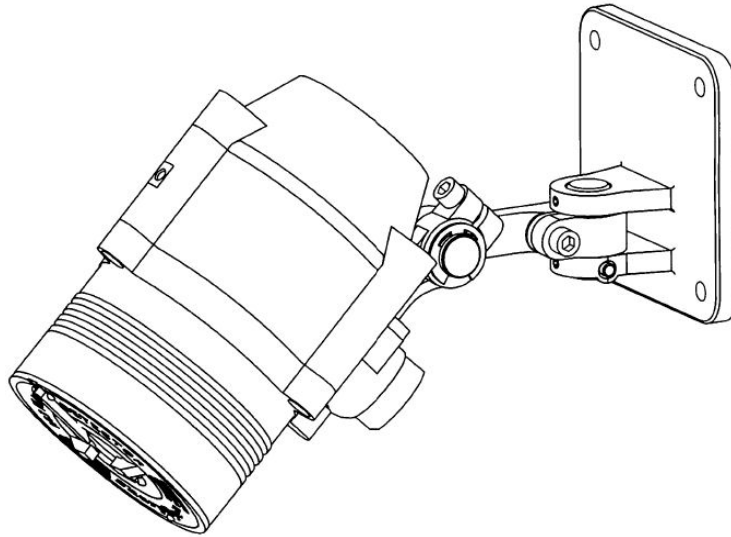


Figure 15: Tilt Mount

D.3 Weather Protection – '(Ref B103908)

The weather protector protects the detector from different weather conditions, such as snow and rain.

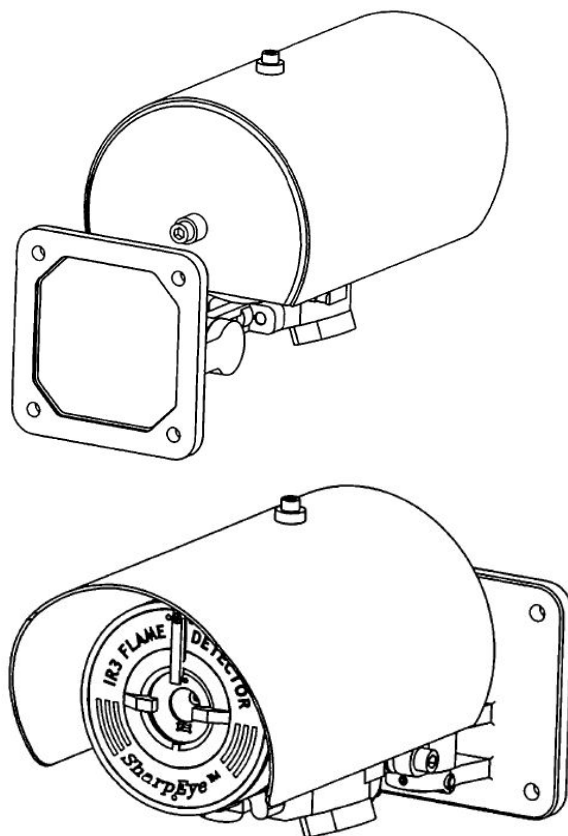


Figure 16: Weather Protection

D.4 Laser Detection Coverage Pointer - P/N 777166

The Laser Detection Coverage Pointer evaluates detector coverage on-site. The device is an add-on accessory that enables designers and installers to optimize detector location and assess the actual coverage of installed detectors.

The device is universal and can be used with all 40/40 SharpEye Optical Flame Detectors.

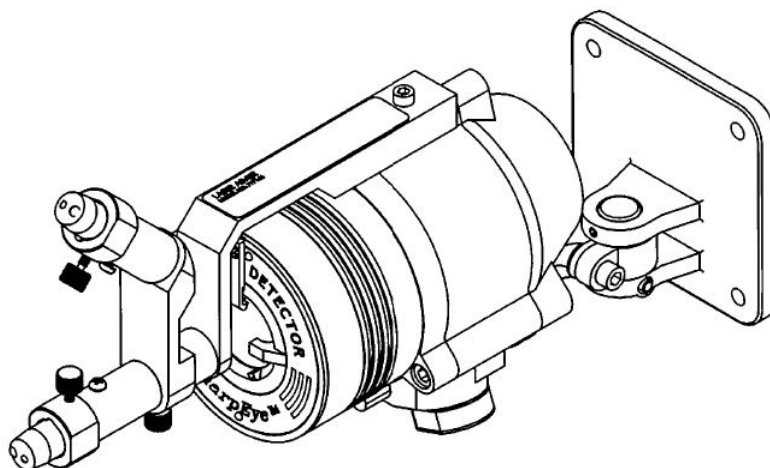


Figure 17: Laser Detection Coverage Pointer

D.5 Air Shield - P/N 777161

The Air Shield enables you to install the detector in dirty areas and using compressed air, keep the window clean. This prevents the accumulation of dirt on the window and enables the detector to continue to operate under harsh conditions.

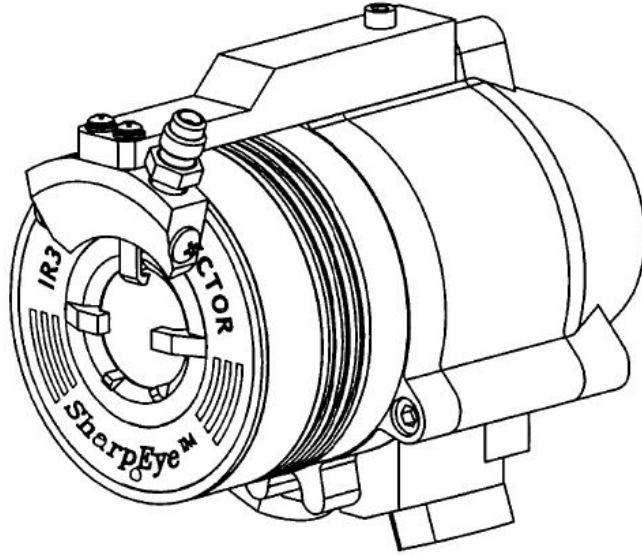


Figure 18: Air Shield

E SIL-2 Features

E.1 40/40I Flame Detector

This appendix details the special conditions to comply with the requirements of EN 61508 for SIL 2.

The 40/40I Flame Detector can only be used in low or high demand mode applications, see IEC 61508.4, Chapter 3.5.12.

E.1.1 Safety Relevant Parameters

Perform the following functional checks of the detector:

- **Alternative 1:** Functional check of the detector every 180 days:
 - **HFT:** 0
 - **PFD:** 3.0×10^{-4} (~ 3% of SIL-2) if only Alarm Relay is used for alerting.
 - **PFD:** 3.2×10^{-4} (~ 3.2% of SIL-2) if 4-20mA – interface is used as alarm.
 - **PFH:** 1.5×10^{-7} 1/h (~ 14.9% of SIL-2) for 4-20mA application.
 - **SFF:** 95% fulfils the conditions of EN 61508 for SIL2
- **Alternative 2:** Functional check of the detector every 365 days:
 - **HFT:** 0
 - **PFD:** 4.5×10^{-4} (~ 4.5% of SIL-2) if only Alarm Relay is used for alerting.
 - **PFD:** 4.9×10^{-4} (~ 4.9% of SIL-2) if 4-20mA – interface is used signal current as alarm.
 - **PFH:** 1.5×10^{-7} 1/h (~ 14.9% of SIL-2) for 4-20mA application.
 - **SFF:** 95% fulfils the conditions of EN 61508 for SIL2

E.1.2 Guidelines for Configuring, Installing, Operating and Service

The alert conditions according to SIL 2 can be implemented by an:

- Alert signal via 20mA current loop
- or
- Alert signal via alarm relay and the fault relay

E.1.2.1 Conditions for Safe Operating

48 The flame detector shall consist only of the approved hardware and software modules.

49 The 24V power supply must fulfill the requirements for PELV / SELV of EN 60950.

50 The automatic BIT (Built-In-Test) must be activated.

51 The set-up parameters must be verified (as described in *Using the 4-20mA Interface for Alerting* on page 49, point 52 and in *Using the Alarm Relay Contact for Alerting* on page 49, point 56) and the function of the 40/40 Flame Detector (flame detection, function of the 4-20mA interface, relay functions) must be checked completely.

E.1.2.2 Using the 4-20mA Interface for Alerting

52 The following parameters shall be set:

- AUTOMATIC BIT test = on
- Connected to 4-20mA Terminals

53 The following allowed output current must be supervised with an accuracy of $\pm 5\%$:

- Normal State = 5mA
- Warning State = 10mA
- Alarm State = 15mA

54 The output current must be supervised regarding the over-and under run of the 4-20mA.

55 The 4-20mA can be used as low and high demand mode.

E.1.2.3 Using the Alarm Relay Contact for Alerting

56 The following parameters shall be set:

- AUTOMATIC BIT Test = on
- Connected to N.C contact of Alarm Relay Terminals
- Connected to Fault Relay Terminals

57 The relay contacts (“alarm” – and “faulty relay”) must be protected with a fuse rated at 0.6 of the nominal specified relay contact current.

58 The maximum contact rating that is allowed per SIL-2 is 30VDC.

59 It is to be considered that the contact of the Alarm Relay opens if there is a fire alarm.

60 During the forwarding and evaluation of the alarm it must be noted that the relay contact opens.

61 The alarm relay can be used as low demand only.

E.1.2.4 Other

62 The complete function of the flame detector (flame detection, function of the 4-0mA interface, the relays) must be examined at least every six or twelve months (see *Safety Relevant Parameters* on page 48, when the flame detector must be switched OFF and ON).

63 The window of the sensor must be examined at appropriate time intervals for partial contamination.

64 The HART and the RS 485 interfaces must not be used for the transmission of the safety-related data.



La Société **Industrial Scientific Oldham**, ZI Est 62000 Arras France, atteste que le matériel neuf destiné à être utilisé en Atmosphères Explosives désigné ci-après est conforme aux exigences des Directives Européennes:
(The **Company Industrial Scientific Oldham**, ZI Est 62000 Arras France, declares that the new material intended for use in Explosive Atmosphere comply with the requirements of the following European Directives :)

DETECTEUR DE FLAMME SERIE 40/40**FLAME DETECTORS MODELS 40/40****I) Directive Européenne ATEX Atmosphères Explosives 94/9/EC:**

The European Directive ATEX 94/9/EC of 23/03/9: Explosive Atmospheres

Normes harmonisées appliquées :
(Harmonised applied Standards)

EN 60079-0, EN60079-1, EN60079-7, EN 61241-0, EN61241-1

For Tamb : -55°C +75°C



II 2 GD / Ex de IIB+H2 T5 Ex tD A21 IP66/X7 T95°C

For Tamb : -55°C +85°C



II 2 GD / Ex de IIB+H2 T4 Ex tD A21 IP66/X7 T105°C

N° Attestation CE de Type du matériel :
(N° of EC type examination certificate)

SIRA 08ATEX1202

Délivré par l'Organisme notifié :
(Issued by the Notified Body)

SIRA Certification Service, Rake Lane, Eccleston,
Chester, CH4 9JN, UK

N° de la Notification Assurance Qualité de Production :
(N° of the Production QA Notification)

INERIS 00ATEXQ403

Délivré par l'Organisme notifié :
(Issued by the Notified Body)

INERIS, Parc Alata
60550 Verneuil en Halatte, France

II) Directive Européenne CPD Produits de construction 89/106/EEC - 93/68/EEC

The European Directive CPD Construction Products 89/106/EEC- 93/68/EEC

Normes harmonisées appliquées :
(Harmonised applied Standards)

EN 54-10 Flame Points Detectors

Organisme de certification:
(Approval Body)

BRE Certification Ltd.,
Inc. BRE Certification, LPCB & WIMLAS
Garston, Watford, Herts, WD25 9XX, UK

III) Directive Européenne CEM Compatibilité Electromagnétique 2004/108/EC

The European Directive EMC Electromagnetic compatibility 204/108/EC

Normes harmonisées appliquées :
(Harmonised applied Standards)

EN 61000-4 series

CE/ATEX 127

Arras, 30 nov 2009

La Personne Autorisée ATEX
The ATEX Authorized Representative

Lionel Witrant



Industrial Scientific Oldham
Z.I. EST - B.P. 20417
62027 ARRAS Cedex - FRANCE
Tel +33 3 21 60 80 80
Fax +33 3 21 60 80 00

Directeur Technique
Engineering Director

Nous nous engageons

We undertake

1 Les Plus

Au travers de notre service client, à répondre rapidement et efficacement à vos besoins de conseil, de suivi de commande, et ce, partout dans le monde.
A répondre dans les plus brefs délais à toutes questions d'ordre technique.

2 Qualité

A vous assurer la meilleure qualité de produits et de services conformément aux normes et directives internationales en vigueur.

3 Fiabilité & Contrôles

A vous fournir un matériel fiable. La qualité de notre production est une condition essentielle à cette fiabilité. Elle est garantie grâce à des vérifications très strictes réalisées dès l'arrivée des matières premières, en cours et en fin de fabrication (tout matériel expédié est configuré selon vos besoins).

4 Mise en service

A mettre en service, sur demande, votre matériel par nos techniciens qualifiés Ism.ATEX. Un gage de sécurité supplémentaire.

5 Formation

A dispenser des formations ciblées.

6 Contrat d'entretien

A vous proposer des contrats d'entretien évolutifs au regard de vos besoins pour vous garantir une parfaite sécurité :

- Une ou plusieurs visites par an, garantie totale ou partielle,
- Renouvelable par tacite reconduction,
- Incluant le réglage des détecteurs de gaz fixes ou portables et le contrôle des asservissements.

7 Dépannage sur site

A faire intervenir nos techniciens du **Service Après Vente** rapidement. Ceci est possible grâce à nos implantations de proximité en France et à l'étranger.

8 Dépannage en usine

A traiter tout problème qui ne pourrait être résolu sur site par le renvoi du matériel en usine. Des équipes de **techniciens spécialisés** seront mobilisées pour réparer votre matériel, dans les plus brefs délais, limitant ainsi au maximum la période d'immobilisation.

Pour toute intervention du Service Après Vente en France, un numéro Indigo a été mis en place : le 0 825 842 843

1 Strong points

Through our customer service to respond to your needs for advice and order follow-up services wherever in the world you may be.
To answer all your technical questions as quickly as possible.

2 Quality

To provide you with products and services of the best quality, in accordance with current international directives and regulations.

3 Reliability and inspections

To supply you with reliable equipments. The quality of our production is essential to achieve reliability. Quality is ensured by extremely strict verifications carried out as soon as raw materials are received, during production and at the end of manufacture (all shipped equipments are configured to meet your requirements).

4 Start-up

That our Ism.ATEX qualified technicians will start up your equipment, if you wish so. This gives you the guarantee of additional safety.

5 Training

Will train on risks, on products and on consulting: Highlights that meet your needs.

6 Maintenance contract

To offer you open-ended maintenance contracts according to your needs so as to give you the guarantee of complete safety:

- One or more visits a year, comprehensive or partial warranty,
- Renewal by tacit agreement,
- Including the adjustment of fixed or portable gas detectors, the calibration of equipment and the verification of servo-control systems.

7 Field servicing

To send out our **After-Sales Service** technicians quickly for servicing on your site. This is made possible by our efficient network in France and other countries.

8 Factory repairs

We give the undertaking that any problem that cannot be solved in the field will be dealt with by the return of the equipment concerned to our factory. Teams of **specialized technicians** are on hand to ensure the immediate repair of your equipment in the shortest possible time, so keeping downtimes for your equipment to a minimum.

For any specific technical question, please contact our technical support service : 00 33 3 21 60 80 80

NOTRE MISSION

Protéger l'Homme dans ses activités professionnelles.
Fournir la plus haute qualité et le meilleur service client à chaque échange, à chaque instant.

OUR MISSION :

Preserving human life on, above and below the earth.
Delivering highest quality, best customer service...
every transaction, every time.

**INDUSTRIAL
SCIENTIFIC**

EUROPEAN PLANT AND OFFICES

Z.I. Est - rue Orfila B.P. 20417 - 62027 ARRAS Cedex FRANCE

Tél. : 33 3 21 60 80 80 - Fax: 33 3 21 60 80 00

Web site : <http://www.indsci.com>

AMERICAS

Tel. : +1 412 788 4353

Fax : +1 412 788 8353

info@indsci.com

ASIA PACIFIC

Tel. : +86 10 8497 3970

Fax : +86 10 8497 3971

sales@isc-cn.com

EUROPE

Tel. : +33 3 21 60 80 80

Fax : +33 3 21 60 80 00

info@eu.indsci.com

AUSTRALIA/NZ

Tel. : +61 2 8870 3400

GERMANY

Tel. : +49 231 9241-0

NETHERLANDS

Tel. : +31 76 5427 609

SINGAPORE

Tel. : +65 6561 7377

CZECH REPUBLIC

Tel. : +420 234 622 222/3

MIDDLE EAST

Tel. : +971 50 455 8518

SWITZERLAND

Tel. : +41 26 652 51 18

UNITED KINGDOM

Tel. : +44 1280 706114